


Performance Series Real-Time DVR

User's Manual

- H.264 Stand-Alone DVR
- Independent Dual Display
- Triple Streaming
- Auto IP Detection
- iPhone, Android Phone Support

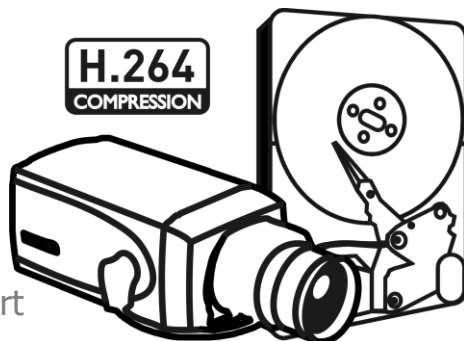

Preface

Thank you for being a user of the world's best digital video recorder (DVR), and the leading Digital Video Surveillance System. For effective usage, please read this manual carefully. For future reference, please keep this manual handy.

Copyright/Authentication/Trademark/Limited Warranty

Copyright

This manual is produced under copyright law. None of its contents may be copied or duplicated without prior approval.

Copyright 2009~

Authentication

CE, FCC, KCC

Trademark

Ethernet(TM) is the trademark of Xerox Corporation.

Microsoft(TM), MS-DOS(TM), Windows(TM logo), Windows(TM) and Windows NT(TM) are the trademarks of Microsoft Corporation, used in the United States and elsewhere.





Limited Warranty

- The manufacturer, importer and agent shall not be responsible for accidental damage (including injury) and other damage caused by inappropriate use or operation of this product.
- The information in this manual is prepared based on the current specifications for the product.
The manufacturer is currently adding new functions and will continue to upgrade the product with new technology. All specifications may be changed without notice to individual users.

Cautions

We strongly recommend that users read all safety cautions carefully before operating the product in order to operate the product appropriately.

Since the indicated cautions contain critical safety information, they must be fully complied with. The cautions are categorized into Danger, Warning, Caution and Important.

 Danger	Risk of death or serious injury. This is the highest priority danger warning.
 Warning	Risk of serious or lesser degree of injury. May also cause damage to the product or to property.
 Caution	Risk of minor injury or damage.
 Important	Requirements or limitations regarding operation. Users are recommended to read the relevant details carefully so as to operate the product properly and without harm.

The above cautions indicate the degree of damage that may occur due to inappropriate use of the system.



Risk of death or serious injury.
This is the highest priority danger warning.

- RISK OF EXPLOSION IF BATTERY IS REPLACED BY INCORRECT TYPE. DISPOSE OF USED BATTERY ACCORDING TO THE INSTRUCTIONS.
- THIS EQUIPMENT IS FOR INDOOR USE AND ALL WIRINGS AND CABLING SHOULD BE LIMITED TO INSIDE OF THE BUILDING.
- Please connect the power cord only to the type of AC outlet indicated in the manual or product specification. If connected to other types of power outlet, fire or electric shock may occur.
- Do not expose the product to moisture or dampness. Doing so may result fire or electric shock.
- Do not place heavy objects on top of the power cord. Damage to the power cord may result in fire or electric shock.
- Do not place containers with liquid or small metal objects on top of the product. Liquid or small metal objects getting into the unit may lead to fire or electric shock.
- Do not score, bend, twist, pull or heat the power cord. Damage to the power cord may lead to fire or electric shock.
- Do not remove the top casing of the product. Doing so may result in electric shock. If internal examination and maintenance are deemed necessary, contact the authorized system vendors or installers.
- Do not modify the product in any way. Doing so may lead to fire or electric shock.
- In case of lightning, immediately turn off the power switch and remove the power cord from the power outlet. Failure to do so may result in fire or electric shock.
- Please use only the power cord supplied with the product. Use of other power cords may result in fire or electric shock.
- In case of smoke, smell or noise, immediately turn off the power switch and remove the power cord from the power outlet. Continued operation of the product may result in fire or electric shock. Request a maintenance service from the authorized system vendors or installers.
- If the product is dropped or damaged, turn off the power switch and remove the power cord from the power outlet. Continued operation of the product may result in fire or electric shock. Users should request a maintenance service from the authorized system vendors or installers.
- Do not touch the product with wet hands. Doing so may result in electric shock.



Risk of serious or lesser degree of injury.
May also cause damage to the product or to property.

- Do not leave the power cord or other cables in passageways. Passers-by may trip and fall.
- Avoid contact with water or beverages. It may result in damage that cannot be repaired.
- In case of lightning, immediately turn off the power switch and remove the power cord from the power outlet. The product may otherwise be damaged.
- Excessive current from the product and the camera may result in an electric shock. Connect the power cord only to an appropriate power source when the product is disconnected from its own power supply.



Risk of minor injury or damage.

- If a foreign substance is stuck to the product, remove it using a soft cloth or tissue. Do not use chemical agents (thinner, solvent, etc.) to remove the substance.
- Do not operate or store the product in the following places.
 - An area that is either too cold or too hot
 - An area of high humidity, in front of an air-conditioner, or in places subject to sudden temperature changes
 - An area with excessive dust
 - Areas where heat from the product cannot be dissipated through both of the product's side ventilation openings
- Do not place credit cards/telephone cards/bank account books/tickets and other objects with magnetic properties near the product.
- Static electricity may cause damage to the internal parts of the product. Please remove static electricity from your body before touching the rear panel and internal electronic parts of the product.
- If this product is damaged beyond repair or reaches its maximum service life, dispose of it in compliance with local laws and regulations regarding the disposal of lead and plastic waste.



Important

Requirements or limitations regarding operation. Users are recommended to read the relevant details carefully so as to operate the product properly without any injury or damage.

- The product may not work properly if the power source is unstable or if an electric shock occurs. Make sure to use the correctly rated power.
- The product is designed to be safe against electric power failures; however, damage may occur at a power failure. Current data may be damaged or not be recorded properly. Make sure to use an Uninterruptible Power Supply (UPS).
- Since the product is designed to record video data on a hard disk, an error in the hard disk or other miscellaneous errors might prevent the product from recording properly. Periodic maintenance is required for proper operation of the product.
- The product is designed for users to configure their own interface. However, a user configuration error could lead to an operation failure. This product should be set up by certified installers only.
- Since the product is connected - and tightly coupled - to exterior accessories (camera, sensor, LAN, Hard Disk, etc.), there is a risk of malfunction from external causes. Make sure to have certified installers do regular maintenance on all devices in the system.
- Use the rack mounting handle provided with the product for installation.
- In this product, 1 Kbyte equals 1,024 bytes, 1 Mbyte equals 1,048,576 bytes and 1 Gbyte equals 1,073,700,000 bytes.

Contents

Preface	1
Contents	4
Chapter 1. Introduction	7
1. The System	7
2. General Features	7
3. Specification	8
Chapter 2. System Installation	10
1. Package Contents	10
2. Connecting Devices	11
2-1. 4 Channel Premium DVR.....	11
2-2. 8/16 Channel Premium DVR.....	14
3. Cautions.....	16
Chapter 3. Using DVR.....	17
1. Basic Operation	17
1-1. Front Panel & IR Remote Controller	17
1-2. Turning on the System.....	17
1-3. Menu Bar	18
1-4. Display Icons	18
1-5. User or Admin Login	20
1-6. The Main Menu	21
1-7. Contextual Menu	22
2. DVR Configuration	23
2-1. SYSTEM.....	23
2-1-1. MENU > SYSTEM > Information	23
2-1-2. MENU > SYSTEM > Date & Time.....	24
2-1-3. MENU > SYSTEM > User.....	24
2-1-4. MENU > SYSTEM > Quick Setup.....	26
2-1-5. MENU > SYSTEM > System Log	26
2-2. DEVICE.....	27
2-2-1. MENU > DEVICE > Camera	27
2-2-2. MENU > DEVICE > Audio.....	28
2-2-3. MENU > DEVICE > Alarm.....	28
2-2-4. MENU > DEVICE > Keyboard	29
2-2-5. MENU > DEVICE > RS232 & RS485	29
2-3. DISPLAY	30
2-3-1. MENU > DISPLAY > Display	30
2-3-2. MENU > DISPLAY > VGA	30
2-3-3. MENU > DISPLAY > CVBS.....	31
2-3-4. MENU > DISPLAY > Digital Signage.....	32
2-4. RECORD	33
2-4-1. MENU > RECORD > Storage	33
2-4-2. MENU > RECORD > Record.....	33
2-4-3. MENU > RECORD > Utilities	35
2-5. NETWORK	36
2-5-1. MENU > NETWORK > Address	36
2-5-2. MENU > NETWORK > DDNS	37
2-5-3. MENU > NETWORK > Notification	37

2-5-4. MENU > NETWORK > Transmission	38
2-6. EVENT	39
2-6-1. MENU > EVENT > Sensor	39
2-6-2. MENU > EVENT > Motion	40
2-6-3. MENU > EVENT > Video Loss.....	43
2-6-4. MENU > EVENT > Text-In	44
2-6-5. MENU > EVENT > System.....	46
3. Playback	47
3-1. Go to Time.....	49
3-2. Calendar Search	49
3-3. Event Search.....	49
3-4. Text-In Search.....	50
3-5. Backup Data Playback	51
3-6. Playback Control	52
4. Backup.....	53
4-1. Backup	53
4-2. Instant Backup.....	54
4-3. Clip Maker.....	54
Chapter 4. Remote Software	55
1. Using Remote Software.....	55
1-1. Starting the Software.....	55
1-2. Site Set Up	57
1-3. Favorite Set Up	60
1-3. Site List Panel	62
1-4. Tool Panel	63
1-4-1. DVR Status.....	63
1-4-2. PTZ	63
1-4-3. TEXT-IN	64
1-4-4. GPS	64
2. Remote Playback.....	65
2-1. Calendar Search	65
2-2. Event Search.....	66
2-3. Text-In Search.....	67
2-4. Saving the recorded data	68
2-5. Play Backup Data	69
2-6. Play Independent HDD Data on PC.....	70
3. Setup	71
3-1. Remote Software Setup	71
3-2. Remote DVR Setup.....	75
3-3. Remote Upgrade	76
4. Callback	77
Appendix A. Remote Access Using I.E.	79
Appendix B. How to set DDNS using router	83
Appendix C. Digital Signage Maker	89
1. How to use Digital Signage Maker	90
Appendix D. PFRM Instructions	92
1. Outline	92
2. How to connect.....	93
Appendix E. NEMON Network Archiver Instructions	95
1. Outline	95

2. Feature.....	95
3. How to use Network Archiver	96
4. Set Up	100
5. Reference	106
COMPLIANCE NOTICE OF FCC:	107
WEEE (Waste Electrical & Electronic Equipment).....	107
ROHS Compliance.....	107

Chapter 1. Introduction

1. The System

This product is targeted towards the expanding DVR market. As the market is expanding from Professional to Consumer and into wider sectors, both price and feature oriented products are highly on demand across different market sectors. This product is designed to fulfill these various aspects of different market needs. This highly affordable, reliable, and usable DVR series is to fulfill basic DVR requirements and the most satisfactions.

2. General Features

- True H.264 Standard Video Compression
- Embedded Linux System to give you the Ultimate Reliability
- Dedicated DB Structure for Stability
- Various Recording Resolution D1/Half D1/CIF
- CMS (Central Monitoring System)
- Easy Setup same like DVR GUI in CMS
- Web Monitoring, Searching and Setup
- Own Media Player for Backup Playback
- Two USB Port for Mouse operation, Multi USB Hub and Backup
- Up to Two SATA HDD and No Limitation of Capacity
- Two- Way Audio
- Multiple DVRs can be operated with One Keyboard Controller
- Text-In & Relay Output Support
- Real Time Recording and Multi Ch. Playback
- Triple Streaming / Digital Zoom
- iPhone, Android Phone Support

• Independent Dual Display

Dual Display allows user to use both VGA and CVBS outputs at the same time with different display options. Two different individual display modes can be set on each monitor output. Two different display mode (Live Monitoring on one monitor and Playback on the other) can be displayed and controlled at the same time. This function will provide high flexibility and efficiency for monitoring options for the users.

Note: This manual covers the 4-channel, 8-channel and 16-channel DVRs. The DVRs are identical except for the number of cameras, audio inputs and alarms. The GUI illustrations and descriptions in this manual are based on the 4 channel model.

3. Specification

Model		4 Channel Performance DVR
Video	In	4 BNC (without Loop-out)
	Out	1 VGA, 1 CVBS (Dual Display)
Audio	In	4 RCA (Line-In)
	Out	1 RCA (Line-Out)
Device	Sensor In	4 TTL (3+Emergency)
	Alarm Out	2 Open Collector Output
	I/O Interface	RS232, RS485, USB x 2
Display	Speed	Real Time
	Resolution	720 x 480 (NTSC)
	Split Screen	1, 4, PIP, Digital Zoom
Recording	Compression	H.264 Codec
	Speed / Resolution	120fps@CIF(NTSC) 120fps@Half D1(NTSC) 60fps@D1(NTSC)
	Picture Quality	Very High, High, Standard, Low
	Mode	Time-lapse, Event, Time & Event, Emergency (Panic)
Playback	Display	1, 4, Digital Zoom
	Search Mode	Calendar Search, Event Search, Text-In Search, Go to Time
	Playback Mode	Multi Channel Normal & Reverse Play, RW & FF (x2, x4, x8, x16, x32), Frame to Frame, Pause
Network	Interface	Ethernet (10/100 Base)
	Protocol	TCP/IP, HTTP, DHCP, ADSL(PPPoE), RTP/RTSP
	Application	Live, Playback, Setup, Notification (Callback, E-Mail)
	Web Browse	Internet Explorer 7 or higher
	Mobile Support	iPhone, Android Phone (Real Streaming)
Storage		2 x SATA HDD
Backup		External HDD(USB), External USB Memory
Control		Front Panel Button, USB Mouse port, IR Remote Controller, Joystick Controller port
OSD		Graphic User Interface (Multilingual)
Approval		FCC, CE, KCC
ROHS		ROHS Compliance
Power Consumption		DC12V, 3.33A (40W)
Operating Temperature		41°F~104°F
Operating Humidity		0%~80% / non-condensing
Dimension		13.39(W)x2.64(H)x10.43(D)inch
Weight		4.4lbs (without HDD)







Model		8 Channel Performance DVR	16 Channel Performance DVR
Video	In	8 BNC (Loop-out option*)	16 BNC (Loop-out option*)
	Out	1 VGA, 1 CVBS (Dual Display)	
Audio	In	8 RCA (Line in) – Option*	
	Out	1 RCA (Line Out)	
Device	Sensor In	4 TTL (3+Emergency)	
	Alarm Out	2 Open Collector Output	
	I/O Interface	RS232, RS485, USB x 2	
Display	Speed	Real Time	
	Resolution	720 x 480 (NTSC)	
	Split Screen	1,4,6,9,PIP,Digital Zoom	1,4,6,8,9,13,16,PIP, Digital Zoom
Recording	Compression	H.264 Codec	
	Speed / Resolution	240fps@CIF(NTSC) 240fps@Half D1(NTSC) 120fps@D1(NTSC)	480fps@CIF(NTSC) 240fps@Half D1(NTSC) 120fps@D1(NTSC)
	Picture Quality	Very High, High, Standard, Low	
	Mode	Time-lapse, Event, Time & Event, Emergency (Panic)	
Playback	Display	1, 4, 6, 9, Digital Zoom	1,4,6,8,9,13,16,Digital Zoom
	Search Mode	Calendar Search, Event Search, Text-In Search, Go to Time	
	Playback Mode	Multi Channel Normal & Reverse Play, RW & FF (x2, x4, x8, x16, x32), Frame to Frame, Pause	
Network	Interface	Ethernet (10/100 Base)	
	Protocol	TCP/IP, HTTP, DHCP, ADSL(PPPoE), RTP/RTSP	
	Application	Live, Playback, Setup, Notification (Callback, E-Mail)	
	Web Browse	Internet Explorer 7 or higher	
	Mobile Support	iPhone, Android Phone (Real Streaming)	
Storage		2 x SATA HDD	
Backup		External HDD(USB), External USB Memory	
Control		Front Panel Button, USB Mouse port, IR Remote Controller, Joystick Controller port	
OSD		Graphic User Interface (Multilingual)	
Approval		FCC, CE, KCC	
ROHS		ROHS Compliance	
Power Consumption		DC12V, 3.33 (40W)	
Operating Temperature		41°F~104°F	
Operating Humidity		0%~80% / non-condensing	
Dimension		13.39(W)x2.64(H)x10.43(D)inch	
Weight		4.4lb (without HDD)	

* Requires optional accessory connector(s). Please ask about this to your supplier.

Chapter 2. System Installation

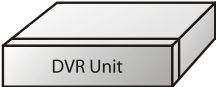1. Package Contents

The following components are included in the product packaging:


DVR Unit	
DC Adaptor	
Power Cord	
Remote Controller	
Quick Guide	
Customer Card	

Note: Please download Users' Guide and Remote Client S/W from the address written on the customer card.

2. Connecting Devices


2-1. 4 Channel Premium DVR

The rear panel of the 4 channel performance DVR looks like the following:

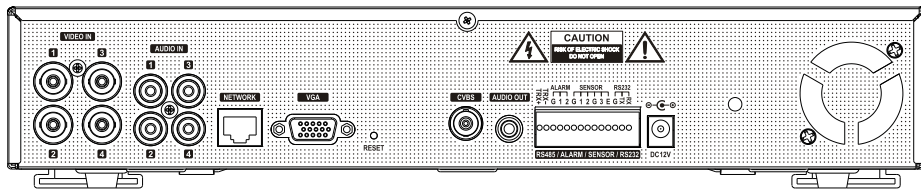


- **Front USB:** On the front panel, two USB ports are provided to connect external devices like HDD and Flash memory for Backup and System upgrade. A USB mouse can only be connected to the USB port dedicated for mouse.

Video Input

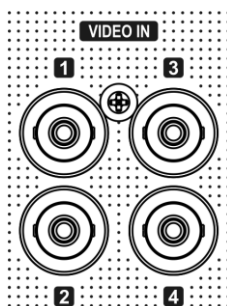

Connect the coaxial cables from the cameras to the BNC video connectors.

Audio Input

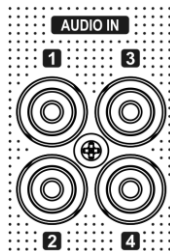

The 4 channel DVR can record audio up to 4 sources. Connect the audio sources to the Audio-In RCA connectors. All channels need external pre-amplifiers.


It is the user's responsibility to determine if local laws and regulations permit recording of audio or not.

Audio Out



You will need to connect a speaker and an amplifier to this output. The DVR does not have a built in amplifier.

Video Output

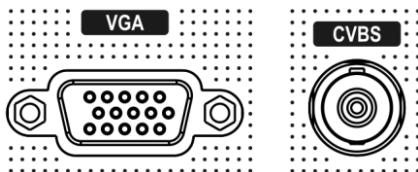

Connect the monitors to VGA or CVBS out connector. Dual Display allows user to use both VGA and CVBS outputs at the same time with different display options. Two different and individual display modes such, as live on one and playback on the other, can be set on each monitor output. This function will provide such high flexibility and efficiency for monitoring options.


Note: VGA Monitor is set as a main monitor when system boots up. To move the control to another monitor (CVBS), please use one of the following control options.

1. Press and Hold Display button for 3 seconds.
2. Click 2 mouse buttons at the same time.
3. Choose "Move Display Focus" on the contextual menu on GUI.

Please refer to following list for independent dual display/control options.

VGA Monitor	CVBS Monitor
LIVE	LIVE (O)
	PLAYBACK (O)
	PTZ (O)
	DISIGTAL SIGNAGE (O)
PLAYBACK	LIVE (O)
	PLAYBACK (X)
	PTZ (O)
	DISIGTAL SIGNAGE (X)
PTZ	LIVE (O)
	PLAYBACK (O)
	PTZ (O)
	DISIGTAL SIGNAGE (O)
DIGITAL SIGNAGE	LIVE (O)
	PLAYBACK (X)
	PTZ (O)
	DISIGTAL SIGNAGE (O)

RS485/ALARM/SENSOR

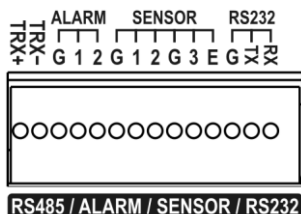

The RS485 connector can be used to control PTZ cameras. The DVR can also be controlled remotely by an RS-485 control keyboard through this port.


2 alarm output connectors are provided to connect external alarms such as sirens or lights. Alarm output connectors are Open-collector output signals.

3 sensor input and 1 emergency sensor input connectors are provided to connect the DVR to external alarm sensor devices. This input will be processed as Alarm events by the DVR. The emergency sensor is designed for Emergency recording only. The DVR will do the Emergency record as per the configurations when this port is triggered.

An RS-232C connector is provided to connect the DVR to an ATM or POS machine for Text-In function.

To make connections on the terminal block, press and hold the button and insert the wire in the hole below the button.

ETC

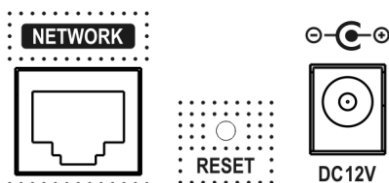


- **Network:** Connect a Cat5 cable with an RJ-45 connector to the DVR's network port for monitoring, playback, and setup from a remote site. See **Chapter 3-2. DVR Configuration** for configuring the Network connections.
- **Reset:** The DVR has a Reset switch that will only be used to return all the settings to the original factory settings. To reset the unit, turn the DVR off first. Turn the DVR on while poking a straightened paperclip in the reset hole. Hold the switch while the DVR is initializing.
- **Power Connector:** Connect adapter cable to the power connector on the rear panel. (DC12V, 3.33A) Input AC power to the adapter. (free voltage from 100V to 240V, 50/60Hz)


2-2. 8/16 Channel Premium DVR

The rear panels of the 6/18 channel Performance DVR look like the following:

[8 Channel Premium Model]

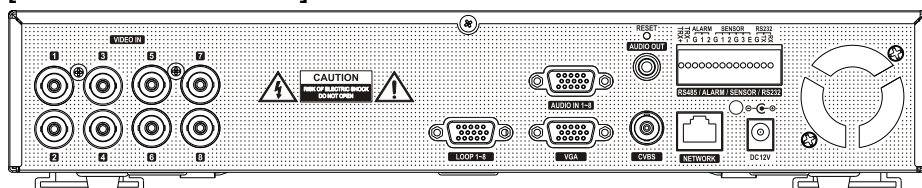


[16 Channel Premium Model]

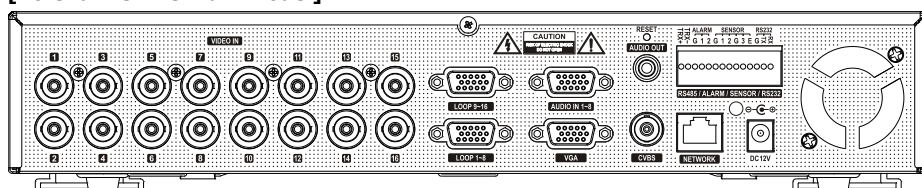


- **Front USB:** On the front panel, two USB ports are provided to connect external devices like HDD and Flash memory for Backup and System upgrade. A USB mouse can only be connected to the USB port dedicated for mouse.

Video Input

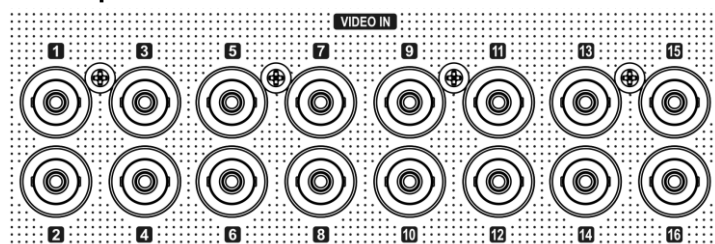

Connect the coaxial cables from the cameras to the BNC video connectors.


Loop-Through Video

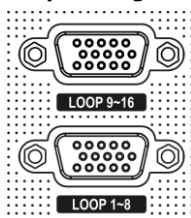

Connect the coaxial cables from the Loop BNC connector (Optional accessory) to another device.

Note: To use Loop option, additional Loop BNC connector (Optional accessory) is needed. Please contact your supplier about this.

 
Audio Input



The DVR can record audio up to 8 sources. Connect the audio sources to the Audio-In Multi-connectors (Optional Accessory). All channels need external pre-amplifiers.

It is the user's responsibility to abide to local laws and regulations regarding to recording audio.

Video Output

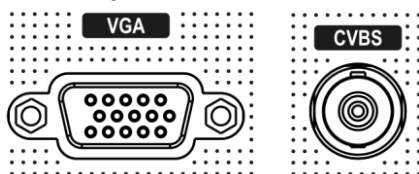


Connect the monitors to VGA or CVBS out connector. Dual Display allows user to use both VGA and CVBS outputs at the same time with different display options. Two different and individual display modes such, as live on one and playback on the other, can be set on each monitor output. This function will provide such high flexibility and efficiency for monitoring options.

Note: VGA Monitor is set as a main monitor when system boots up. To move the control to another monitor (CVBS), please use one of the following control options.

1. Press and Hold Display button for 3 seconds.
2. Click 2 mouse buttons at the same time.
3. Choose "Move Display Focus" on the contextual menu on GUI.

RS485/ALARM/SENSOR

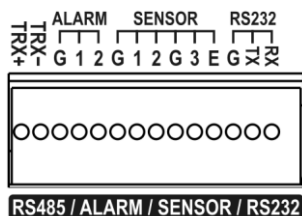

The RS485 connector can be used to control PTZ cameras. The DVR can also be controlled remotely by an RS-485 control keyboard through this port.


2 alarm output connectors are provided to connect external alarms such as sirens or lights. Alarm output connectors are Open-collector output signals.

3 sensor input and 1 emergency sensor input connectors are provided to connect the DVR to external alarm sensor devices. This input will be processed as Alarm events by the DVR. The emergency sensor is designed for Emergency recording only. The DVR will do the Emergency record as per the configurations when this port is triggered.

An RS-232C connector is provided to connect the DVR to an ATM or POS machine for Text-In function.

To make connections on the terminal block, press and hold the button and insert the wire in the hole below the button.

ETC

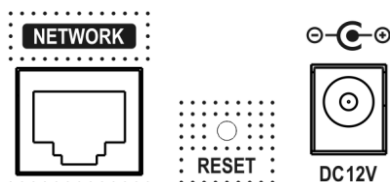

- **Network:** Connect a Cat5 cable with an RJ-45 connector to the DVR's network port for monitoring, playback, and setup from a remote site. See **Chapter 3-2. DVR Configuration** for configuring the Network connections.
- **Reset:** The DVR has a Reset switch that will only be used to return all the settings to the original factory settings. To reset the unit, turn the DVR off first. Turn the DVR on while poking a straightened paperclip in the reset hole. Hold the switch while the DVR is initializing.

-
- **Power Connector:** Connect adapter cable to the power connector on the rear panel. (DC12V, 3.33A) Input AC power to the adapter. (free voltage from 100V to 240V, 50/60Hz)

3. Cautions

- Avoid installing the product in hot places or near the heat generator. (It may cause fire.)
- Do not put vase, flowerpot, cup, cosmetics, drug, or anything that contains liquid on the product. (It may cause fire or electric shock, or they may fall and cause injury)
- Do not insert or drop any metal object (coin, hair pin) or flammable object (match, paper) into the air vent. (It may cause fire or electric shock)
- Do not put a heavy object on the product. (It may damage the product or may fall and cause injury.)
- Secure the power plug and do not move it around. (It may cause fire.)
- Unplug the power plug when there are thunders and lightening. (It may cause fire.)
- To clean the product, wipe the surface with a dry towel. Using chemical or cleaner may change the color or peel off the paint.
- Do not plug multiple units to a single outlet. (It may cause electric shock.) If there is smoke or smell, stop the operation immediately. Turn the power off and unplug it, and contact our service center. (it may cause fire or electric shock.)
- When unplugging the cord, do not strain the cord too much. (A cord can be damaged and may cause fire or electric shock.)
- Do not plug or unplug with wet hands. (It may cause electric shock.)
- Do not twist the power cord. (It may cause fire or electric shock.)
- Use the adapter supplied or specified. (An adapter that does not match the power rating may cause fire or electric shock.)
- Do not install the product in the place that is exposed to rain, wind, or water drop. (It may cause fire, electric shock, or malfunction.)
- Keep away from fire. (It may cause an explosion or overheating.)
- Do not disassemble or alter the product on your own. (It may cause malfunction or electric shock.)
- Keep away from flammable materials such as flammable spray. (It may cause fire.)
- Do not install the product in a dirty place. (Too much dirt may cause fire.)
- Do not install the product on an unstable places like shaking or inclined table. (It may fall and cause injury.)
- Do not put heavy objects on power cord, or do not put the power cord underneath the product. (It may cause fire or electric shock.)
- Do not use multiple extension cords to power up the device. (The extension cords may heat up and cause fire.)
- When there is a dirt or debris on the metal pin of power cord or the power outlet, clean it before using. (It may cause fire.)
- Do not use damaged power cord or plug. Do not excessively bend, twist, or pull the cord. Do not place the cord on a pathway or near heat. Do not use a loose power outlet. (It may cause fire or electric shock.)
- Do not drop the product or apply a physical shock. (It may injure people or cause malfunction.)
- Do not touch the power adaptor or signal controller. (It may cause electric shock.)
- Do not block the cooling fan. (It may cause fire.)
- An improper type batteries may explode.
- Dispose of used batteries safely.
- Do not let the children play with the batteries. Keep the product away from the children. (If a child put the battery in his mouth, contact a doctor right away.)

Chapter 3. Using DVR

1. Basic Operation

1-1. Front Panel & IR Remote Controller

The DVR should be correctly installed before proceeding. The location and shape of the buttons and function keys may vary depending on the DVR model. Only the most commonly used functions are linked to the buttons on the front panel.

Control	Description
USB Port	Two USB ports are located on the front panel.
Camera Buttons (1~0)	Pressing camera buttons and Enter button will display the selected camera full screen. Buttons are also used to enter passwords.
MENU / EXIT Button	Opens up the Setup Menu. The User will need to enter the authorized password to access the menu. In Playback mode, MENU button opens the Playback Menu.
DISPLAY Button	Changes the screen display mode in the current live or playback screen.
SEQUENCE Button	Displays the live channels sequentially.
Up, Down, Left, Right Arrow, ENTER Buttons	Move the cursor and select an option in the MENU screen, or controls the PTZ camera. (pan, tilt)
BACKUP Button	Copies the recorded data to an external storage device.
PLAYBACK Button	Goes to the playback mode from live mode.
⏸ PAUSE Button	Under playback mode, this button pauses the playback. - Saves the PTZ preset in PTZ mode.
▶ PLAY Button	Plays the video in forward direction. Press the button repeatedly to increase play speed up to max 32 times (1, 2, 4, 8, 16, 32 times) faster. Use this button to move the cursor to right in MENU screen. - Focus far in PTZ mode.
◀ R.PLAY Button	Plays the video in reverse direction. Press the button repeatedly to increase play speed up to max 32 times (1, 2, 4, 8, 16, 32 times) faster. Use this button to move the cursor to left in MENU screen. - Zoom Out in PTZ mode.
⏭ STEP FORWARD Button	Move forward by one frame at Pause. Use this button to move the cursor up in MENU screen. - Focus near in PTZ mode.
◀⏮ STEP BACKWARD Button	Move backward by one frame at Pause. Use this button to move the cursor down in MENU screen. - Zoom In in PTZ mode.
PTZ Button	Enables PTZ control mode from the live monitoring mode.

ZOOM Button	Zooms in the current screen.
PIP Button	Turns on PIP screen mode in the live monitoring screen.
AUDIO Button	Selects a camera for live & playback audio output.
OSD Button	Turns on/off the OSD display.
LOG Button	Checks the system's log information.
ID Button	Selects the DVR's system ID. (When using Remote controller)
E.REC Button	Pressing the E.REC button starts Emergency Recording Mode of all camera channels, and "!" icon will be displayed on each channel while in the emergency recording mode. Pressing the button again will stop E.REC mode.
Status LED	Power, HDD, Network, Alarm

1-2. Turning on the System

Connecting the power cord will turn the DVR system on. It will take approximately 10 to 30 seconds for the system to be initialized. Once the system is initialized, it will display live screen, and begin recording of video automatically.

Note: To turn off the system, select SHUTDOWN under main menu (MENU > SHUTDOWN) and unplug the power cord when the shutdown message is displayed.

Note: When a new HDD is installed, it should be formatted first in the following menu location: "MENU > RECORD > Storage > HDD format"














1-3. Menu Bar

The menu bar will appear on the bottom of the screen as shown below.



	Pressing the Menu will bring up Main Menu.
	Shows the % of HDD used.
	Turns on when the HDD is set to be overwritten.
	Sequence display mode.
	Turns on when the system is connected to the network.
	Turns on when the Alarm is activated.
	E.REC (Emergency Recording) Mode.
	Displays date & time.
	IR Remote Controller

1-4. Display Icons

	No Recording
	Recording (Red)
	E.REC (Emergency Recording)
	Event Recording (Red)
	Pre Event Recording (Blue)
	Motion Detection
	Sensor Detection
	Text In
	PTZ Camera
	Instant Backup
	Clip Maker (Blue)
	Backup (Red)
	Video Loss

1-5. User or Admin Login

The image displays two screenshots of a login interface. The left screenshot, titled "Login", features a title bar, an "ID" dropdown menu currently set to "Administrator", a "Password" input field with a toggle button "...", and "OK" and "Cancel" buttons. Below these is a numeric keypad with digits 0 through 9. The right screenshot, titled "Password", shows a title bar, a password input field, a virtual keyboard with letters A-Z, numbers 1-0, and symbols, and "OK" and "Cancel" buttons.

Press MENU to display Main Menu. Login in screen asking for ID and password will appear. Password can be set up to 8 numbers by a combination of 0 to 9. Click numbers on the bottom to enter password when using a mouse. Click "... " button to pop up virtual keyboard to enter password when using the front buttons or remote controller.

The factory default password is '1111'. At default mode, press "1111" and OK to log in to the system. Password can be set under password option (MENU > SYSTEM > User). The menu will automatically be logged out if it is idle for a certain time. This "Auto Logout Time" can be set under password set up option (MENU > SYSTEM > User).

1-6. The Main Menu

The DVR's Main Menu consists of SYSTEM, DEVICE, DISPLAY, RECORD, NETWORK and EVENT. Each menu has various sub menus that allow detailed set up of the system. Use Mouse, Remote Controller or Front Buttons to access each menu.

Note: Please make sure to log out of the menu after changing any configuration to prevent any unauthorized changes.

MAIN MENU	SYSTEM	Information
		Date & Time
		User
		Quick Setup
		System Log
	DEVICE	Camera
		Audio
		Alarm
		Keyboard
		RS232 & RS485
	DISPLAY	Display
		VGA
		CVBS
		Digital Signage
	RECORD	Storage
		Record
		Utilities
	NETWORK	Address
		DDNS
		Notification
		Transmission
	EVENT	Sensor
		Motion
		Video Loss
		Text-In
		System
	LOGOUT	
	SHUTDOWN	

1-7. Contextual Menu

Live: Administrator		
Digital Signage	>	
Camera	>	
Layout	>	Camera >
OSD	>	Layout >
Freeze		2 x 2
Sequence		3 x 3
Zoom		1 + 12
PIP		✓ 4 x 4
Audio		Next Page
PTZ		Previous Page
Backup		
Playback	>	
Remote	>	
Emergency Record		
Log		
Move Display Focus		
Setup Menu		

Additional Contextual Menu screen appears by right-clicking the Mouse.

Digital Signage: Select Digital Signage output either to VGA or CVBS.

Camera : Select camera no.

Layout : Select display mode (8/16 ch. DVR Only)

OSD : Select OSD display option

Text-in Info. : Turns On or Off the text input on the screen.

Freeze : Pause the current image display

Sequence : Begin sequence display

Zoom : Zoom in the image (x2, x4, x8)

PIP : Select PIP mode and camera for PIP display

Audio : Select Audio outs

PTZ : Select PTZ options

Backup : Select backup options

Playback : Playback recorded data

E. Record : Start Emergency Recording

Log : Select System/Event log

Move Display Focus: Move the control (e.g. setup, OSD and etc.) from one monitor to another when using both CVBS and VGA at the same time.

Setup Menu: Displays the Main setup menu

For more information on Contextual Menu please refer to 2. DVR Configuration.

2. DVR Configuration

2-1. SYSTEM

Under SYSTEM menu, System configuration options for general Information, Date &Time, User, Quick Setup, and System Log can be selected.

2-1-1. MENU > SYSTEM > Information

The left screenshot shows the 'SYSTEM > Information' menu. It contains the following fields and buttons:

- DVR Name: [Text Field]
- MAC Address: [00:06:F4:0B:8A:24]
- Version: [1.0.0] [Upgrade]
- Remote Control ID: [0]
- Video Type: [AUTO]
- Configuration: [Export] [Import] [Default]
- [OK] [Cancel]

The right screenshot shows the 'DVR Name' input screen. It features a virtual keyboard with the following layout:

1	2	3	4	5	6	7	8	9	0	-	=	\
A	B	C	D	E	F	G	H	I	J	K	L	M
N	O	P	Q	R	S	T	U	V	W	X	Y	Z
Del	Space	←	→	.	.	.	/					

Below the keyboard are [OK] and [Cancel] buttons.

In the Information box, DVR Name, System Version, Upgrade, Mac Address, and Configuration options can be selected. Highlight and press at DVR Name to enter or change the name of the DVR. Name the DVR by using the virtual keyboard.

To upgrade firmware on the system, save the upgrade file to USB Flash Memory and connect it to DVR. Once the Device is connected, press Upgrade button to execute the system upgrade. Upgrade will take approximately 5 minutes. DVR will reboot automatically when the upgrade is completed.

Note: DO NOT remove USB Flash Memory or turn off the system during the upgrade. This may cause system malfunctioning.

Remote Control ID

Entering Remote Control ID allows controlling of multiple DVRs individually by one remote controller. If the Remote Control ID remains as 0, the DVR will always be controlled by the remote control.

Video Type

The system automatically detects camera signal types (NTSC/PAL). But you can manually select in between NTSC/ PAL.

Configuration

System settings can be saved and loaded using Configuration Import/Export option.

Export: Save settings to USB Flash Memory

Import: Load saved settings from USB Flash Memory

Default: Load factory default settings

Note: Configuration Import does not affect or changes system and network settings.
Network settings will also not be changed when Default configuration is loaded.

2-1-2. MENU > SYSTEM > Date & Time

In the Date & Time menu, Time Zone, Date, Time, NTP Server, and Holiday options can be selected.

Highlight and press Time Zone to select appropriate Time Zone.

Select 'Use Daylight Saving Time' if it is applicable. Enter start and end date/time for local 'Daylight Saving Time'.

Press button to set up Date and Time. Press **Format** button to select a date & time display format.

Select 'Use NTP' to enter Time Servers to be synchronized with the DVR. Highlight and press to enter the address of Time Server using the virtual keyboard. Press 'Update' to synchronize the DVR's clock with the registered time server.

Note: NTP is not an essential part of the DVR's operation. Any type of Standard Time Server can be used (e.g. time.windows.com). Time

Synch might not be completed due to heavy traffic or delays from the Time Synch server.

Press Holiday to set specific dates for Holiday setup. Set specific date by pressing button. Change and delete dates using and buttons.

Note: Please update this every year since some holidays change yearly.

2-1-3. MENU > SYSTEM > User

Press User Tab to enter/add a new user.

Auto Login: It allows an automatic log-in into the system when the system is booted up. Since this is an automatic log in without the authentication process, please make sure the DVR has a limited access by non-authorized personnel.

Auto Logout: Turn On or Off Auto Logout option.

Press to add a new user. To remove an existing user, press next to it.


User Name: Enter a user name

Group: Select a Group which the new user will belong to

Password: Set a new password.

Note: Default password is "1111"

Note: Do not use "admin" as a user name since it may cause an error.

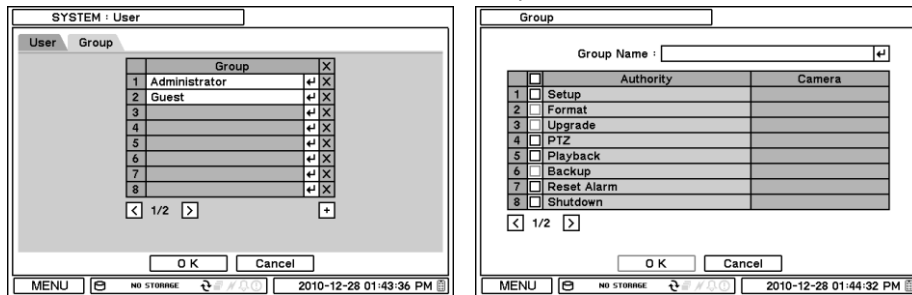

Configure user groups for the system. Press Group tab to add a group and set authorities.

Press to add a new group. Enter a group name and select access rights for the group. To remove an existing Group, press next to it.

2-1-4. MENU > SYSTEM > Quick Setup

Quick Setup : System

DVR Name :

Language :

Administrator Password :

Time Zone : (GMT) Greenwich Mean Time : Dublin,

Date : 2010-12-28

Time : 01:45:26 PM

MENU 2010-12-28 01:45:26 PM

Quick Setup : Network

Type :

IP Address :

Subnet Mask :

Gateway :

☐ DNS server address automatically

DNS Server :

ID :

Password :

Port :

MENU 2011-03-28 03:16:13 PM

Port

Network Port :

Web Port :

RTSP Port :

iPhone Port :

	Port
Live	10101
Playback	10102
Setup	10103

MENU 2010-12-28 01:45:59 PM

Quick Setup : Record

☒ Overwrite

☒ Use Emergency Record

Mode	fps	Quality	Resolution
Time Record	30	Standard	CIF
Event Record	30	High	CIF
Emergency Record	30	High	CIF

MENU 2011-03-28 03:16:44 PM

Quick Setup : Storage

	Capacity	Type	Usage	Status
1	149.99 GB	HDD	Record	Good
2				

MENU 2010-12-28 01:47:55 PM

Quick Setup Menu allows easy configurations for the basic main menu settings.

2-1-5. MENU > SYSTEM > System Log

SYSTEM : System Log

Time	Contents
2009-09-01 05:30:54 PM	Login: Administrator
2009-09-01 05:30:51 PM	System startup
2009-09-01 05:26:46 PM	Login: Administrator
2009-09-01 05:26:44 PM	System startup
2009-09-01 05:25:03 PM	Login: Administrator
2009-09-01 05:25:00 PM	System startup
2009-09-01 05:23:58 PM	Login: Administrator
2009-09-01 05:23:53 PM	System startup
2009-09-01 05:13:22 PM	Login: Administrator
2009-09-01 05:13:18 PM	System startup
2009-09-01 03:17:15 PM	Shutdown

1/2

MENU 2009-09-01 06:16:20 PM

In the System Log, full list of system logs can be searched.

Press button to refresh the log. Use button to search through the log page by page.


The Log can be exported to a text file (txt

format).

2-2. DEVICE


Under Device menu, Device configurations for Camera, Audio, Alarm, Keyboard, and RS232 & RS485 (POS/PTZ/Keyboard) can be selected.

2-2-1. MENU > DEVICE > Camera

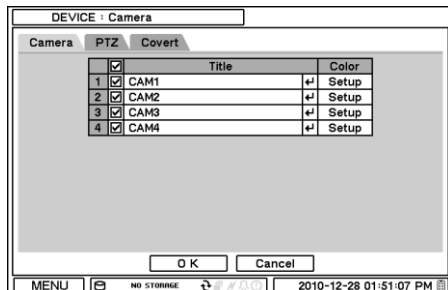

In Camera display option, display of a camera (as well as 'video loss' message) can be disabled by unmarking the box next to it. Press to change the title of each Camera.

Press Setup button under Color column to adjust color of the video. Click and drag the scale on each line to adjust each color level.

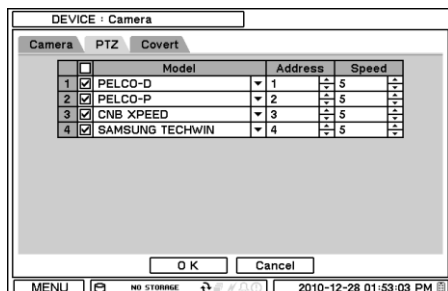

PTZ Control

Select the channel that is connected to a PTZ camera. To activate the PTZ control mode, right click the mouse to select PTZ from the contextual menu.

Note: PTZ can only be controlled in a single screen mode.

Use icons on the screen to control PTZ. By using a mouse, click arrow heads to move the PTZ around. Also click PTZ function icons at the bottom of the screen to change.



	Zoom Out
	Zoom In
	Focus on near distance
	Focus on far distance
	Save Presets
	Load Presets

DEVICE : Camera

Camera PTZ Covert

	Day	From - To	Mode	Camera	X
1	ALL	00:00 ~ 24:00	Low	1	X
2	SAT-SUN	00:00 ~ 24:00	High	2-8	X
3					X
4					X
5					X
6					X
7					X
8					X
9					X
10					X

1/4

O K Cancel

MENU 99% 2010-01-07 02:54:26 PM

Covert Setting

Covert setting allows a privacy monitoring. If Covert is set, live image will not be displayed. Covert can be scheduled by day and time, and each camera can be set to a different covert mode.

Covert Low Mode: No display of video image on screen, but OSD will still be displayed on the screen.

Covert High Mode: Neither the video image nor OSD will be displayed on the screen.

Note: The Covert options will not affect the recording as it only changes live monitoring screen.

2-2-2. MENU > DEVICE > Audio

DEVICE : Audio

	Title	Camera	
1	AUDIO1	4	
2	AUDIO2	3	
3	AUDIO3	2	
4	AUDIO4	1	

O K Cancel

MENU NO STORAGE 2010-12-28 01:56:56 PM

Select Audio for recording Audio. Each Camera and Audio can be linked to different channel numbers from each other.

2-2-3. MENU > DEVICE > Alarm

DEVICE : Alarm

Alarm Schedule

Alarm Duration : 10 sec.

	Title	Type
1	ALARM1	NO
2	ALARM2	NO

O K Cancel

MENU NO STORAGE 2010-12-28 01:58:46 PM

DEVICE : Alarm

Alarm Schedule

	Day	From - To	Mode	Alarm	X
1	MON-FRI	00:00 ~ 24:00	Event	1,2,B	X
2	SAT-SUN	00:00 ~ 24:00	Event	1,2,B	X
3	ALL	09:00 ~ 18:00	Off	1,2,B	X
4					X
5					X
6					X
7					X
8					X
9					X
10					X

O K Cancel

MENU NO STORAGE 2010-12-28 02:00:04 PM

Alarm duration: Set Alarm activation time from 5 seconds to 10 minutes.

Select Schedule tab to schedule an Alarm operation. Alarm can be set by day, time, mode, and inputs (camera).

Schedule1 : Alarm

	Alarm	Alarm
1	ALARM1	B Buzzer
2	ALARM2	

O K Cancel

MENU NO STORAGE 2010-12-28 02:00:28 PM

Press **[F4]** to choose Alarms outputs and Buzzer output when activated.

2-2-4. MENU > DEVICE > Keyboard

DEVICE : Keyboard

Keyboard Model : TB-CN3R1

DVR ID : 0

OK Cancel

MENU 0% 2009-04-04 07:58:26 PM

Press to find and select the desired keyboard from the list.

2-2-5. MENU > DEVICE > RS232 & RS485

DEVICE : RS232 & RS485

	bps	Data Bit	Stop Bit	Parity	Usage
RS232	9600	8	1	None	Text-In
RS485	9600	8	1	None	PTZ

OK Cancel

MENU 0% 2009-04-04 08:00:44 PM

Press to choose a device to connect on each ports.

RS232: Supports Text In (POS) device, PTZ, and Keyboard device (An external signal converter may be required)

RS485: Supports Text In (POS) device (An external signal converter may be required), PTZ, and Keyboard device.


Note: Text In devices (e.g. Cash Register)


needs to use ASCII code.

2-3. DISPLAY

In Display menu, Display options for OSD and Monitor can be configured.


2-3-1. MENU > DISPLAY > Display

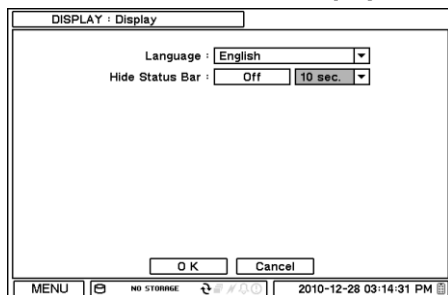


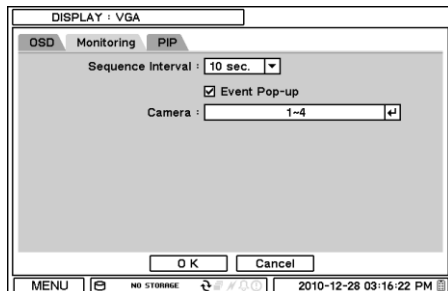
Language: Select the system language. Press  to find available language options.

Hide Status Bar: Select On/Off and time to hide Status Bar when system is not in use.

2-3-2. MENU > DISPLAY > VGA

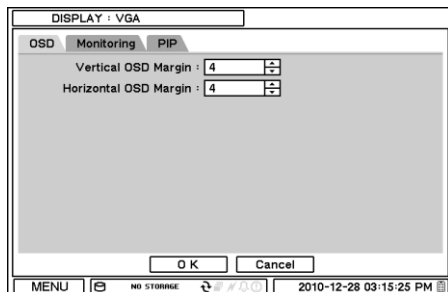


OSD margin: Set OSD margin (position) using .




Sequence Interval: Set time interval between displays of each camera in sequential display mode.


Event Pop-up: Pops up the camera image in full screen when an event occurs.

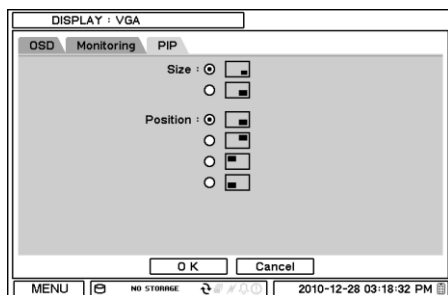


PIP: Select the desired size and positions of PIP (Picture In Picture) display.

2-3-3. MENU > DISPLAY > CVBS

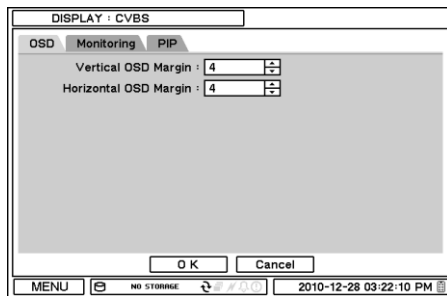


OSD margin: Set OSD margin (position) using .

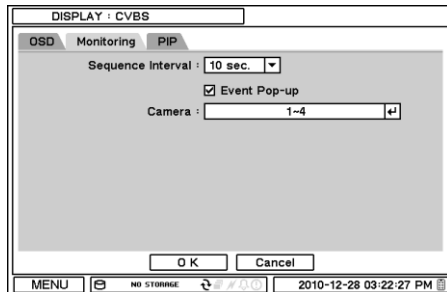

Sequence Interval: Set time interval between displays of each camera in sequential display mode.

Event Pop-up: Pops up the camera image in full screen when an event occurs.

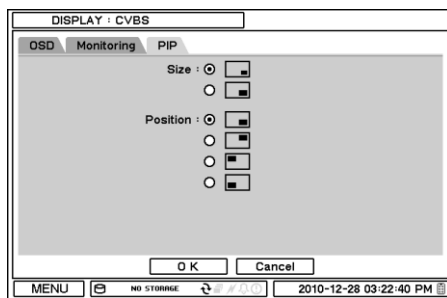

PIP: Select the desired size and positions of PIP (Picture In Picture) display.

2-3-4. MENU > DISPLAY > Digital Signage

DISPLAY : Digital Signage

Digital Signage Schedule

Initiate Digital Signage : On 1 min.

Picture Interval (sec) : Video 10

Import

OK Cancel

MENU NO STORAGE 2010-12-28 03:26:56 PM

Initiate Digital Signage: Set Initial Digital Signage as On to display imported Digital Signage Data. Set a time for the Digital Signage to display when the system is not in use.

Picture Interval (sec): Select the type of data to be displayed under Digital Signage mode. Select either Video or Image data format. Select the interval time for displaying the image data.

Import: Retrieve prepared Digital Signage data from the USB Memory. Please refer to Appendix C to see how to make the digital signage video clip.

DISPLAY : Digital Signage

Digital Signage Schedule

	Day	From ~ To	Display	X
1	ALL	00:00 ~ 24:00	CVBS	X
2	MON~FRI	09:00 ~ 18:00	VGA + CVBS	X
3				X
4				X
5				X
6				X
7				X
8				X
9				X
10				X

OK Cancel

MENU NO STORAGE 2010-12-28 03:39:01 PM

Schedule: Schedule display of Digital Signage by time and date.

2-4. RECORD

Under Record menu, options for Storage, Record, and Record Tools can be configured.

2-4-1. MENU > RECORD > Storage

The first screenshot shows the 'RECORD: Storage' screen. It has tabs for 'Storage' and 'S.M.A.R.T.'. The 'Storage' tab displays a table with columns: Capacity, Type, Usage, and Status. The table has two rows: Row 1 shows 149.99 GB, HDD, Record, and Good. Row 2 is empty. Below the table is a 'Format' button. The 'Record' section shows a date range: 2010-03-11 12:24:57 PM ~ 2010-03-15 11:20:45 AM, and a usage bar: 97.35 GB / 149.99 GB. There are 'Detail' and 'Reload' buttons. The second screenshot shows the 'RECORD: Detail' screen. It has a dropdown for 'HDD1' and a 'Record' button. Below is a list of timestamps: 2010-02-10 08:23:22 AM ~ 2010-02-10 08:29:23 AM, 2010-02-10 08:33:23 AM ~ 2010-02-10 08:41:55 AM, 2010-02-10 09:12:03 AM ~ 2010-02-10 09:22:12 AM, 2010-02-10 09:25:54 AM ~ 2010-02-10 09:31:27 AM, 2010-02-10 09:25:54 AM ~ 2010-02-10 09:31:27 AM, and 2010-02-10 09:33:21 AM ~ 2010-02-10 09:36:44 AM. There are navigation arrows, '1/1', 'Close', and 'Reload' buttons.

Storage screen displays the information about the installed/connected storage device such as Capacity, Type, Usage, and Status.

Format: Press Format to format the selected HDD.

Record: Displays the HDD's storage space used and the time period of the recorded data.

Detail: Displays the detailed information of the data stored on the HDD

The screenshot shows the 'RECORD: Storage' screen with the 'S.M.A.R.T.' tab selected. It displays a table with columns: Status and Temperature. The table has two rows: Row 1 shows Good and 0 C/32 F. Row 2 is empty. There is an 'Update' button. The bottom status bar shows 'MENU', '0%', and '2009-05-13 02:08:43 PM'.

In S.M.A.R.T screen, status of the HDD are displayed with its temperature. Click Update to get the latest status.

2-4-2. MENU > RECORD > Record

The first screenshot shows the 'RECORD: Record' screen with the 'Record' tab selected. It has checkboxes for 'Overwrite' and 'Use Emergency Record'. The 'Auto Deletion (days)' is set to 'Off' with a value of '7'. Below is a table with columns: Mode, ips, Quality, and Resolution. The table has three rows: Time Record (30, Standard, CIF), Event Record (30, High, CIF), and Emergency Record (30, High, CIF). There are 'O K' and 'Cancel' buttons. The second screenshot shows the same screen with the 'Schedule' tab selected. It has checkboxes for 'Overwrite' and 'Audio Record'. The 'Resolution' is set to 'CIF'. The 'Auto Deletion (days)' is set to 'Off' with a value of '7'. Below is a table with columns: Mode, ips, and Quality. The table has three rows: Time Record (30, Standard), Event Record (30, High), and Emergency Record (30, High). There are 'O K' and 'Cancel' buttons.

In Record, general recording options such as overwrite, resolution, speed, recording quality and etc. can be configured.

Overwrite: Select Overwrite to overwrite the recording on the HDD when it gets full.

Auto Deletion(days): Turn on Auto Deletion to delete the data older than what is specified automatically.

Resolution: Select resolution of the data to record.

Time Record: Set ips/quality for continuous recording

Event Record: Set ips/quality for event recording

Emergency Record: Set ips/quality for emergency recording.

Note: The ips needs to be higher than 1 when recording the Audio at D1 or Half D1, otherwise the Audio and Video will not be synchronized.

The screenshot shows the 'RECORD: Record' menu with the 'Event' tab selected. It contains three settings: 'Pre-Event Duration' set to 'Off' with a '10 sec.' dropdown, 'Emergency Record Duration' set to 'No Limit' with a '1 min.' dropdown, and 'Event Record Duration' set to '1 min.' with a dropdown. At the bottom are 'O K' and 'Cancel' buttons. The status bar at the very bottom shows 'MENU', 'NO STORAGE', and the time '2010-12-29 05:24:34 PM'.

In Event, recording for pre and post Event period can be configured.

Pre-Event Duration: Video Images right before the Event can be recorded by setting Pre-Event. Duration of Pre-Event recording can be set up to 30 seconds in Pre-Event(sec) menu option.

Emergency Record Duration: Recording time for the Emergency recording can be set to either continuous (NO Limit) or from 5 seconds to 30 minutes.

Event Record Duration: Set event recording duration up to 30 minutes.

The screenshot shows the 'RECORD: Record' menu with the 'Schedule' tab selected. It displays a table with columns: Day, From - To, Mode, Camera, and Setting. The table has 10 rows, with the first row showing 'ALL' for Day, '00:00 ~ 24:00' for From - To, '11/11' for Mode, '1-4' for Camera, and '30 / 30' for Setting. Each row has a small 'X' icon in the Setting column. At the bottom are 'O K' and 'Cancel' buttons. The status bar at the very bottom shows 'MENU', 'NO STORAGE', and the time '2011-01-13 10:59:57 AM'.

The screenshot shows the 'Schedule1: Setting' menu. It contains a table with columns: Mode, ips, Quality, and Resolution. The table has two rows: 'Time Record' with values '30', 'Standard', and 'CIF'; and 'Event Record' with values '30', 'High', and 'CIF'. Below the table is a checkbox labeled 'Use Default Setting' which is checked. At the bottom are 'O K' and 'Cancel' buttons. The status bar at the very bottom shows 'MENU', 'NO STORAGE', and the time '2010-12-29 05:25:43 PM'.

In Schedule, recording schedules and operations can be set in detail by day, time, modes, cameras, and recording options.

Press **[+]** to add a new schedule. To remove an existing schedule, press **[X]**. Press Setting to set recording options.

Use Default Setting: Check Use Default Setting to record as per the setting in Record menu.

2-4-3. MENU > RECORD > Utilities

RECORD > Utilities

Recording Status

				Status
1	12ips	STD	352x240	O
2	12ips	STD	352x240	X
3	12ips	HI	704x480	O
4	12ips	HI	704x480	X

Reload

Close

MENU NO STORAGE 2010-12-29 05:39:53 PM

In Recording Status, current recording options, and status are displayed. The list will show Recording Frames, Video Quality, Resolution, and Audio recording (o/x) in order.

RECORD > Utilities

Storage Capacity

	Ips	Quality	Resolution
1	30	Standard	CIF
2	30	Standard	CIF
3	30	Standard	CIF
4	30	Standard	CIF

36.96GB/day, 6 day(s) 11 hour(s)

Calculate

Close

MENU NO STORAGE 2010-12-29 05:47:56 PM

In Storage Capacity, estimated HDD usage per day and recording period can be calculated. Set the resolutions, ips, number of cameras, and quality. Press Calculate button.

The GB/day shows the estimated HDD size that will be used after a day of recording. Day and Hours show the estimated recording period when the HDD gets full.

Note: This calculation is estimation only. Same frame rate and video quality does not guarantee the same storage size and recording duration. This is due to the variety of conditions on images such as more/less colors or more/less movements. This situational variance will affect the file sizes more in lower frame rate settings.

Note: Reduce the Ips for more recording period. Changing resolution will not change the IPS automatically.

Note: approximate size for each resolution – CIF: 360X240, Half D1: 720x240, D1: 720x480

2-5. NETWORK

Under Network menu, Network options such as network Address, DDNS, Remote Notification, and Transmission can be configured.

2-5-1. MENU > NETWORK > Address

The left screenshot shows the 'Address' tab of the 'NETWORK : Address' screen. It includes fields for Type (set to DHCP), IP Address (0.0.0.0), Subnet Mask (0.0.0.0), Gateway (0.0.0.0), DNS Server (8.8.8.8), ID, and Password. There is a checkbox for 'DNS server address automatically'. The right screenshot shows the 'Port' tab of the same screen. It includes fields for Network Port (10101), Web Port (80), and RTSP Port (554), a checkbox for 'Use UPnP', and a table of ports: Live (10101), Playback (10102), and Setup (10103).

In Address screen, network information such as Type, IP address, Subnet Mask, Gateway Port, and DNS can be configured.

Type: Select the type of network configuration from: Static IP, DHCP, and ADSL(with PPPoE).

IP Address: Enter IP address using button.

Subnet Mask: Enter Subnet Mask using button.

Gateway: Enter Gateway using button.

DNS: Enter the IP address of the DNS server. DNS Server enables the user to use a domain name instead of the IP address through a DDNS service.

DNS sever address automatically: Select this option to get DNS Server Address automatically from the server when using DHCP or PPPoE option.

In Port screen, Select appropriate port number for remote access to the system. The port list shows ports that need to be opened for each operation.

Network Port: Set port for Remote Client access.

Web Port: Set port for Remote Client access over the web browser.

RTSP Port: Set port for Android based devices.

iPhone Port: Set port for iPhone.

Note: ID and Password are required in ADSL(with PPPoE) type.

Note: Default TCP port is 10101, but it can be set in between 1500 and 32000 if it is necessary.

UPnP Option: By checking the UPnP option, it automatically sets the ports on the connected router.


Note: The router should support UPnP option for this feature. If the same ports are already being used, DVR displays a message asking to try other ranges.

2-5-2. MENU > NETWORK > DDNS

In the DDNS screen, network options for DDNS can be selected.

DDNS: Dynamic Domain Name Server allows network connections when the DVR is connected to a network that uses a dynamic IP address.

Note: A website, "autoipset.com", offers free registrations for DDNS service.
Please refer to the appendix for DDNS set up page.

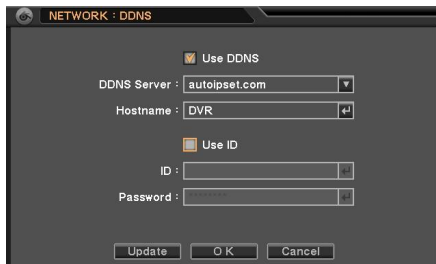


Host Name: Name the DVR or site using the virtual keyboard by pressing .

ID/Password: ID and Password are required for Authentication.


Note: Use ID/Password registered in DDNS.

Note: Host Name can also be registered automatically without registration from DDNS Server. Just enter Host Name (not duplicated name) and uncheck Use ID box. After clicking Update button, a message is displayed to indicate if it was successful or not.

2-5-3. MENU > NETWORK > Notification

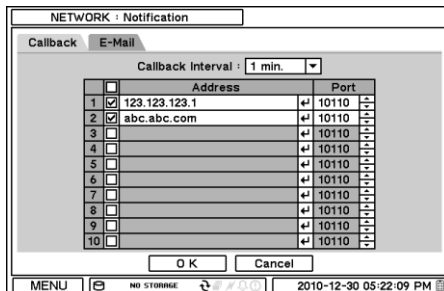

	Address	Port
1	123.123.123.1	10110
2	abc.abc.com	10110
3		10110
4		10110
5		10110
6		10110
7		10110
8		10110
9		10110
10		10110

In Callback screen, enter IP addresses of client sites so that Events detected in local system can be notified to remote client sites simultaneously. Press  to pop up the virtual keyboard.

Callback Interval: Select Callback Interval to set time interval to send out each repetitive event notifications to remote sites.

Note: Any events detected during the set interval time will not be notified right away. e.g. If the interval is set as 30 seconds, only the events registered at every 30 seconds after the first event will be notified.

NETWORK : Notification

Callback E-Mail

E-Mail Interval : 1 min.

	Recipient
1	<input checked="" type="checkbox"/> abc@abc.com
2	<input checked="" type="checkbox"/> test@test.org
3	<input type="checkbox"/>
4	<input type="checkbox"/>
5	<input type="checkbox"/>

SMTP

OK Cancel

MENU 91% 2009-10-27 02:02:48 PM

SMTP

SMTP Server :

Port : 25

Sender :

ID :

Password :

OK Cancel

MENU 0% 2010-08-27 11:18:05 AM

NETWORK : Notification

Callback E-Mail

E-Mail Interval : 1 min.

SMTP Server :

Sender :

Recipient :

OK Cancel

MENU 0% 2009-04-06 09:36:42 AM

In Email Menu box, Events can be notified to personal email addresses in text message format.

E-Mail Interval: Select E-Mail Interval to set time interval between each repetitive event notifications via email.

Recipient: Enter the email address of a recipient. Up to 5 recipients can be entered.

Note: Any events detected during the pre-set interval time will not be notified right away. e.g. If the interval is set as 30 seconds, only the events registered every 30 seconds after the first event will be notified via email.

SMTP Server: Enter SMTP server using the virtual keyboard. SMTP server information can be obtained from the system administrator.

Sender: Enter the address/name where the email will be sent from.

NETWORK : Transmission

Limit Bandwidth (Mbps) : No Limit 10

Mode	ips	Quality	Resolution
Network Live	30	Standard	CIF
Mobile Live	15	Standard	QCIF

OK Cancel

MENU NO STORAGE 2010-12-30 05:23:57 PM

2-5-4. MENU > NETWORK > Transmission

In Transmission menu box, Network transmission parameters such as ips and bandwidth can be configured.

2-6. EVENT

Under Event menu, events can be set in connection with Sensor, Motion, Video Loss, Text-In, and System. [cameras, alarm and remote notifications.](#)

2-6-1. MENU > EVENT > Sensor

The screenshot shows the 'EVENT : Sensor' screen with tabs for Sensor, Record, Alarm, Notification, and PTZ. The 'Sensor' tab is active, displaying a table with the following data:

	Title	Type
1	<input checked="" type="checkbox"/> SENSOR1	NO
2	<input type="checkbox"/> SENSOR2	NO
3	<input type="checkbox"/> SENSOR3	NO
E	<input checked="" type="checkbox"/> EMERGENCY	NO

At the bottom, there are 'O K' and 'Cancel' buttons. The status bar at the very bottom shows 'MENU', 'NO STORAGE', and the date/time '2010-12-30 05:25:29 PM'.

In Sensor screen, activation type for each sensor can be configured. Select Sensor Type using ☐ button.

NC: Normally Closed

NO: Normally Opened

4th Sensor is designed for Emergency recording only. It will initiate the Emergency recording when it is triggered.

The screenshot shows the 'EVENT : Sensor' screen with the 'Record' tab selected. It displays a table mapping sensors to record numbers:

Sensor	Record
1 SENSOR1	1,3
2 SENSOR2	
3 SENSOR3	
E EMERGENCY	1-4

'O K' and 'Cancel' buttons are at the bottom. The status bar shows 'MENU', 'NO STORAGE', and '2010-12-30 05:27:47 PM'.

The screenshot shows the 'SENSOR1' screen with a 'Camera' selection table:

1	<input checked="" type="checkbox"/> CAM1
2	<input type="checkbox"/> CAM2
3	<input checked="" type="checkbox"/> CAM3
4	<input type="checkbox"/> CAM4

'O K' and 'Cancel' buttons are at the bottom. The status bar shows 'MENU', 'NO STORAGE', and '2010-12-30 05:27:57 PM'.

In Record menu box, each sensor can trigger single or multi cameras. Press ☐ to select cameras to be triggered by the sensors.

EVENT : Sensor

Sensor

Record

Alarm

Notification

PTZ

	Sensor	Alarm	
1	SENSOR1	B	↕
2	SENSOR2		↕
3	SENSOR3		↕
E	EMERGENCY	1,2,B	↕

OK

Cancel

MENU

NO STORAGE

2010-12-30 05:28:24 PM

EMERGENCY

	Alarm	Alarm
1	<input checked="" type="checkbox"/> ALARM1	<input checked="" type="checkbox"/> Buzzer
2	<input checked="" type="checkbox"/> ALARM2	


OK

Cancel

MENU

NO STORAGE

2010-12-30 05:28:35 PM

In Alarm screen, each sensor can trigger single or multi alarms. Press  to select alarms to be triggered by the sensors.

EVENT : Sensor

Sensor

Record

Alarm

Notification

PTZ

	Sensor	Notification	
1	SENSOR1	1,2,11,12	↕
2	SENSOR2		↕
3	SENSOR3		↕
E	EMERGENCY	12	↕

OK

Cancel

MENU

NO STORAGE

2010-12-30 05:36:17 PM

SENSOR1

	Callback	E-Mail
1	<input checked="" type="checkbox"/> 123.123.123.1	<input checked="" type="checkbox"/> test@abc.com
2	<input checked="" type="checkbox"/> abc.acc.com	<input checked="" type="checkbox"/> dvr@dvr.com
3	<input type="checkbox"/>	<input type="checkbox"/>
4	<input type="checkbox"/>	<input type="checkbox"/>
5	<input type="checkbox"/>	<input type="checkbox"/>
6	<input type="checkbox"/>	<input type="checkbox"/>
7	<input type="checkbox"/>	<input type="checkbox"/>
8	<input type="checkbox"/>	<input type="checkbox"/>
9	<input type="checkbox"/>	<input type="checkbox"/>
10	<input type="checkbox"/>	<input type="checkbox"/>


OK

Cancel

MENU

NO STORAGE

2010-12-30 05:35:56 PM

In Notification, each sensor can trigger single or multi callback or emailing sites. Press  to enter callback or email address to be triggered by the sensors.

EVENT : Sensor

Sensor

Record

Alarm

Notification

PTZ

	Sensor	PTZ	
1	SENSOR1	1-4	↕
2	SENSOR2		↕
3	SENSOR3		↕
E	EMERGENCY	1	↕

OK

Cancel

MENU

NO STORAGE

2010-12-30 06:05:27 PM

SENSOR1

	Camera	Move to Preset
1	CAM1	1.
2	CAM2	4.
3	CAM3	9.
4	CAM4	16.

OK

Cancel

MENU

NO STORAGE

2010-12-30 06:05:10 PM

PTZ preset can be recalled by an Event. If an Event occurs, the PTZ can recall a designated preset position. As you can see from the menu above, Sensor 1 is set to trigger cameras 1,2,3 and 4. PTZ presets (position) for each camera can be selected when sensor 1 is activated.

PTZ preset can only be recalled by Sensor/Motion/Video Loss events. If several events happen on a PTZ camera at the same time, it will be triggered in the order of Sensor > Motion > Video Loss.

2-6-2. MENU > EVENT > Motion

EVENT : Motion

Motion

Record

Alarm

Notification

PTZ

	Camera	Sensitivity	Area
<input type="checkbox"/>			
1	<input checked="" type="checkbox"/> CAM1	Very High	Setup
2	<input checked="" type="checkbox"/> CAM2	High	Setup
3	<input checked="" type="checkbox"/> CAM3	Normal	Setup
4	<input checked="" type="checkbox"/> CAM4	Low	Setup


OK

Cancel

MENU

NO STORAGE

2011-01-03 09:26:08 AM

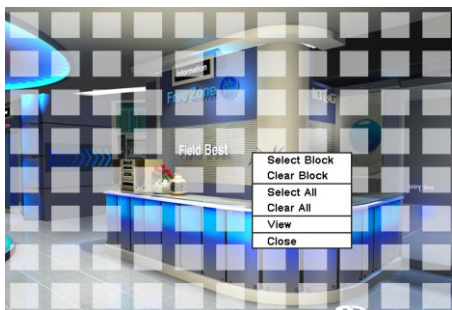

In Motion menu box, Motion Detection function can be configured. Set Motion Detection with its Sensitivity, View, and Area options.

Sensitivity: Select motion sensitivity from Very Low to Very High.

Area: Define the area for motion detection.

Press Setup under Area column to select motion detection areas. The blocks indicate the area where motion would be detected.

Select Block: Use arrow keys to move in the screen. Select individual blocks to set motion zones. Use number keys to select and unselect blocks (When using a mouse, use a left button).

Clear Block: Unselect all blocks inside the box

Select All: Select blocks on the entire screen.

Clear All: Unselect blocks on the entire screen.

View: When enabled, boxes to highlight the motion detection will be displayed on the screen.

	Camera	Record	
1	CAM1	1	⬅️ ➡️
2	CAM2	2	⬅️ ➡️
3	CAM3	3	⬅️ ➡️
4	CAM4	4	⬅️ ➡️

OK Cancel

MENU NO STORAGE 2011-01-03 09:36:21 AM

In Record tab, each camera's recording can be initiated by single and multi motion detections from other cameras. Press **[F4]** to select cameras to be recorded by motion detections.

	Camera	Alarm	
1	CAM1	1,2	⬅️ ➡️
2	CAM2	B	⬅️ ➡️
3	CAM3	2	⬅️ ➡️
4	CAM4	1	⬅️ ➡️

OK Cancel

MENU NO STORAGE 2011-01-03 09:37:54 AM

In Alarm tab, each camera with motion detection can trigger single and multi alarms. Press **[F4]** to select alarms to be triggered by cameras with motion events.

	Camera	Notification	
1	CAM1	1	⬅️ ➡️
2	CAM2	1,2	⬅️ ➡️
3	CAM3	11	⬅️ ➡️
4	CAM4	12	⬅️ ➡️

OK Cancel

MENU NO STORAGE 2011-01-03 09:38:24 AM

In Notification tab, each camera with motion detection can trigger single and multi callback or emailing sites. Press **[F4]** to enter callback or email address to be notified by cameras with motion events.

EVENT : Motion

Motion

Record

Alarm

Notification

PTZ

	Camera	PTZ	
1	CAM1	1-4	↕
2	CAM2	4	↕
3	CAM3	3	↕
4	CAM4	4	↕

OKCancel

MENUNO STORAGE2011-01-03 09:39:07 AM

A PTZ preset can be recalled when a Motion event occurs. Enter PTZ presets to be recalled by cameras with motion events.

2-6-3. MENU > EVENT > Video Loss

EVENT : Video Loss

Record Alarm Notification PTZ

	Camera	Record	
1	CAM1	2-4	↔
2	CAM2	1,3,4	↔
3	CAM3	1,2,4	↔
4	CAM4	1-3	↔

O K Cancel

MENU NO STORAGE 2011-01-03 09:40:03 AM

In record tab, single or multi cameras can be programmed to do event recording when video gets lost on any camera. Press **↔** to select single or multi cameras to be recorded when the video gets lost on each camera.

EVENT : Video Loss

Record Alarm Notification PTZ

	Camera	Alarm	
1	CAM1	1,2,B	↔
2	CAM2	2	↔
3	CAM3	B	↔
4	CAM4	1,2	↔

O K Cancel

MENU NO STORAGE 2011-01-03 09:40:40 AM

In Alarm tab, each camera's video loss can trigger single or multi alarms. Press **↔** to select alarms to be triggered by each camera's video loss.

EVENT : Video Loss

Record Alarm Notification PTZ

	Camera	Notification	
1	CAM1	1-10	↔
2	CAM2	11,12	↔
3	CAM3	1	↔
4	CAM4	11	↔

O K Cancel

MENU NO STORAGE 2011-01-03 09:41:20 AM

In Notification tab, each camera's video loss can be notified to single or multi callback sites or email addresses. Press **↔** to enter callback or email address to be notified by each camera's video loss.

EVENT : Video Loss

Record Alarm Notification PTZ

	Camera	Notification	
1	CAM1	1-10	↔
2	CAM2	11,12	↔
3	CAM3	1	↔
4	CAM4	11	↔

O K Cancel

MENU NO STORAGE 2011-01-03 09:41:20 AM

PTZ's presets can be recalled by a Video Loss event. Enter PTZ presets to be recalled by cameras with Video Loss events.

2-6-4. MENU > EVENT > Text-In

The system can be connected to POS or ATM machines to get Text Input.

Note: The POS/ATM machine must use general ASCII code.

Text-In Model: Select Text-In model from the list

Transaction Begin: Enter the first word from which the text to be displayed on the screen.

Any Character: Check Any Character Box to display all text input.

Transaction End: Enter the last word to which the text to be displayed on the screen. To display additional lines after the transaction end, select more line options.

Ignore String: Enter a word to be ignored.

Line Delimiter: Enter a symbol or a word to be recognized as the end of lines.

Case Sensitive: Select Case Sensitive option to differentiate upper and lower cases.

In Record tab, text event can activate recording of single or multi cameras. Press to select camera(s) to be recorded upon text events. If both RS232/RS485 Ports are used simultaneously, they should be in conjunction with different cameras. For example, if RS232 is programmed to record cameras 1~12, RS485 should be connected to 13~16. RS232 and RS484 ports cannot activate the same camera.

EVENT : Text-In

Text-In

Record

Alarm

Notification

PTZ

	Text-In	Alarm
1	TEXT-IN1	1,2,B
2	TEXT-IN2	

OK Cancel

MENU NO STORAGE 2011-01-03 10:14:57 AM

TEXT-IN1

	Alarm	Alarm
1	<input checked="" type="checkbox"/> ALARM1	<input checked="" type="checkbox"/> B Buzzer
2	<input checked="" type="checkbox"/> ALARM2	

OK Cancel

MENU NO STORAGE 2011-01-03 10:14:43 AM

In Alarm tab, text event can trigger single or multi alarms. Press ☐ to select alarms to be triggered by text event. If B is selected, system will also buzz.

EVENT : Text-In

Text-In

Record

Alarm

Notification

PTZ

	Text-In	Notification
1	TEXT-IN1	1,2,11,12
2	TEXT-IN2	11

OK Cancel

MENU NO STORAGE 2011-01-03 03:11:21 PM

TEXT-IN1

	Callback	E-Mail
1	<input checked="" type="checkbox"/> 123.123.123.1	<input checked="" type="checkbox"/> test@abc.com
2	<input checked="" type="checkbox"/> abc.acc.com	<input checked="" type="checkbox"/> dvr@dvr.com
3	<input type="checkbox"/>	<input type="checkbox"/>
4	<input type="checkbox"/>	<input type="checkbox"/>
5	<input type="checkbox"/>	<input type="checkbox"/>
6	<input type="checkbox"/>	<input type="checkbox"/>
7	<input type="checkbox"/>	<input type="checkbox"/>
8	<input type="checkbox"/>	<input type="checkbox"/>
9	<input type="checkbox"/>	<input type="checkbox"/>
10	<input type="checkbox"/>	<input type="checkbox"/>

OK Cancel

MENU NO STORAGE 2011-01-03 03:11:46 PM

In Notification tab, text event can be notified to single and multi callback sites or email addresses. Press ☐ to enter callback or email addresses to send notices upon text event.

EVENT : Text-In

Text-In

Record

Alarm

Notification

PTZ

	Text-In	PTZ
1	TEXT-IN1	1
2	TEXT-IN2	3,4

OK Cancel

MENU NO STORAGE 2011-01-03 03:12:52 PM

TEXT-IN2

	Camera	Move to Preset
1	CAM1	None
2	CAM2	None
3	CAM3	3
4	CAM4	9

OK Cancel

MENU NO STORAGE 2011-01-03 03:12:41 PM

In PTZ tab, PTZ's preset can be recalled by Text in event. Enter PTZ presets to be recalled by the text event. (More than one PTZ cameras can be configured by a single text input.) Press ☐ to select presets to be recalled with the text inputs.

2-6-5. MENU > EVENT > System

EVENT : System

System Alarm Notification

Storage Full (%) : 100

S.M.A.R.T. Threshold : 65°C / 149°F

OK Cancel

MENU NO STORAGE 2011-01-03 03:13:41 PM

In System menu, S.M.A.R.T function monitors storage conditions such as Temperature, Conditions, and Recording status.

Storage Full value can be configured so that the DVR sends notifications when the HDD usage reaches a certain level. Warning message can be notified in various ways as described below.

In S.M.A.R.T Threshold, you can configure tolerable temperature level of the HDD. If the temperature of HDD increases over the threshold, a notification will be sent in various ways according to the following settings.

EVENT : System

System Alarm Notification

Event	Alarm
1 Storage Bad	B.A.
2 Storage Full	B.A.
3 S.M.A.R.T.	B.A.
4 No Record Storage	B.A.

OK Cancel

MENU NO STORAGE 2011-04-05 04:19:49 PM

Storage Bad

Alarm
1 ALARM1
2 ALARM2

OK Cancel

MENU NO STORAGE 2011-01-03 03:16:19 PM

In Alarm tab, the system event can trigger single or multi alarms. Press to select alarms to be triggered by each event. If Alert is selected, system will pop up a warning message on the screen.

EVENT : System

System Alarm Notification

Event	Notification
1 Storage Bad	
2 Storage Full	
3 S.M.A.R.T.	
4 No Record Storage	

OK Cancel

MENU NO STORAGE 2011-04-05 05:48:24 PM

Storage Bad

Callback	E-Mail
1 123.123.123.1	11 test@abc.com
2 abc.acc.com	12 dvr@dvr.com
3	13
4	14
5	15
6	
7	
8	
9	
10	


OK Cancel

MENU NO STORAGE 2011-01-03 03:22:35 PM

In Notification tab, the system events can be configured to notify single or multi callback sites or email addresses. Press to enter callback or email addresses to be notified upon system events.

3. Playback

The system provides various playback menus in browsing through recorded data. Please click right Mouse button on Search Mode and select the storage type. If Backup Data is selected, the data on the external HDD can be searched.

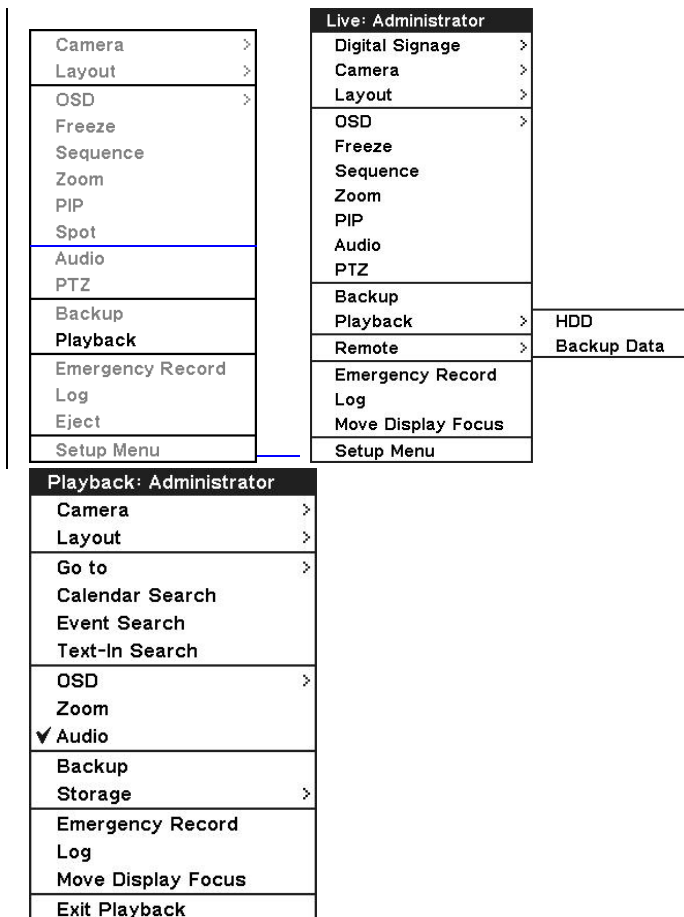

Camera : Select camera no.

Layout : Select display mode (8/16 ch. DVR Only)

Go to : Search recorded data by time/date. Move to the beginning or the end of recorded data. Also search data by 5/10/15/30/60 seconds backward from the current time of search.

Search : Select Calendar Search, Event Search, or Text In Search

OSD : Select OSD display option

Text-In Info. : Select Text display option for POS or ATM machines.

Zoom : Zoom in the image by X2

Audio : Enables Audio output

Backup : Select backup or Clip Copy option

Storage : Select HDD or Backup Data to playback

Emergency Record : Start Emergency Recording


Log : Select System/Event log

Move Display Focus: Choose "Move Display Focus" to control display options on the other

monitor.

Exit Playback: Exit Search Mode and return to Live Mode

3-1. Go to Time


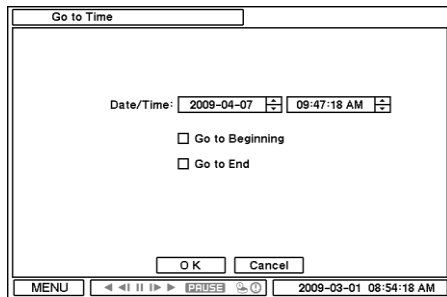


Select Go to Time to browse through recorded data by time/date. Set time/date using button. Use Go to Beginning and End options to search the very first and last data of the recording. Once desired settings are entered, press OK to begin playback.

Go to Beginning : Move to the very first data in the recording.



Go to End : Move to the latest data in the recording.

3-2. Calendar Search

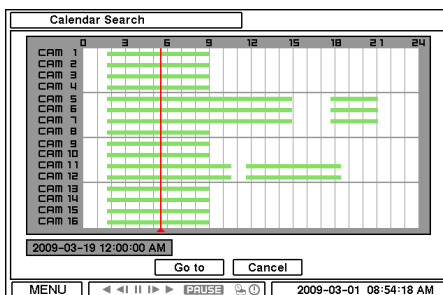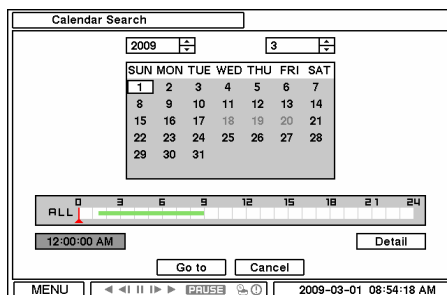

Calendar Search provides easy search on the calendar and time line graph. Dates with recorded data will be highlighted. Once you select the date, it will display recorded time bar below. Click detail to open recorded time table. In the table, the numbers on the top shows the hours in 24 hours format, and titles on the left indicate camera numbers. The color bar shows the time period that was actually recorded on each camera. Move the indicator (line) to go to specific time to play. Press Go To to begin playback.

3-3. Event Search

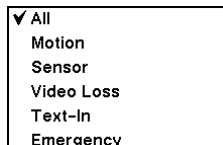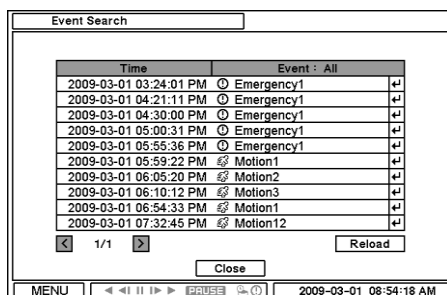

Event Search Menu provides an easy search through recorded events. Select the date and type of event to narrow your search. Press Event: All on the top of the list to display event search menu options.

All: System displays all events

Motion: System displays motion events only

Sensor: System displays Sensor events only

Video Loss: System displays Video Loss events only

Text-In: System displays Text In events only

Emergency: System displays Emergency Recording events only
Once desired list is displayed, move up or down button to highlight a log and press it to play the video.

3-4. Text-In Search

Text-in Search

From : ☐ First

2010-12-0306:40:01 PM

To : ☐ Last

2011-01-0306:40:01 PM

☐

Search Text

1☒ABC

2☐

3☐

4☐

5☐

☐ Case Sensitive

OK

Cancel

MENU

2010-12-03 09:14:20 AM

Text-in Search

Time	Contents

<

1/1

>

Close

MENU

2009-03-01 08:54:18 AM

Text In Search provides an easy search through recorded text input. Enter Time period and specific text to narrow your search. Press Search for detailed information.


From: Set beginning time to be searched from or select First for search from the beginning of the data.

To: Set end time to be searched to or select Last for search to the end of the data.

Search Text: Enter the words to search for.

Once the search detail is entered, press OK to start search the Text data.

3-5. Backup Data Playback

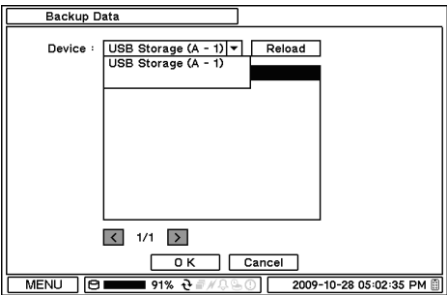



Backup files stored on a media can be played on the DVR. Insert the media that contains backup files and select a file to play.

3-6. Playback Control




R.Play(): Reverse Playback

Step Backward(): Go to the previous image

Pause(): Freeze or Stop current image


Step Forward(): Go to the next image

Play(): Play the data at normal speed


To control the backward and forward playback speed, press ◀ or ▶ repeatedly. Forward/reverse Playback speed can increase up to x32.

4. Backup

Data on the DVR can be saved to a USB Flash memory. Select backup or Clip Maker option in Search or Live mode by selecting Backup in the menu.

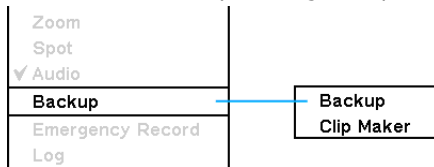

4-1. Backup

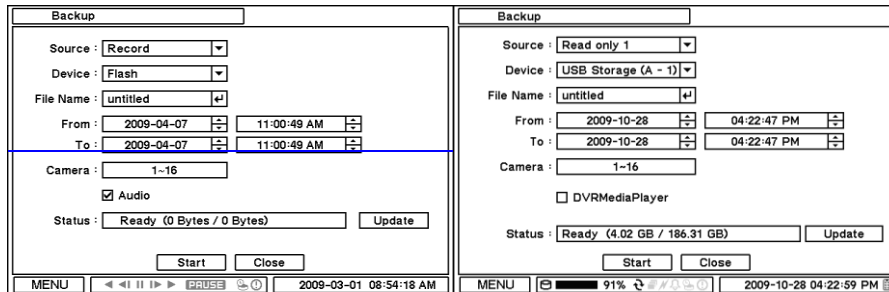

In the BACKUP menu, the data to be saved can be selected.

Press Device ☐ to select which USB Device to save the data to. Only the USB devices that are currently connected to the DVR will be listed.

Select date & time period of data to save using button.

Select Camera's channel number to be saved, or select All to save all recorded data.

Select Audio to save recorded Audio along with the video data.

Status shows available storage space of the device selected for backup, and it will show the progress during the backup.



The files saved (backup) in DVRMediaPlayer (.exe) format allows multi camera backup, and the files can be played on a PC without any specific codec. To open and play the file saved in DVRMediaPlayer (.exe), double click the file, and it will automatically play in an Internet Explorer window. This function is supported only by Internet Explorer 7.0 or above.

Note: The backup process could take longer if the system is being monitored/ played back from the remote location using the client program.

Note: "DO NOT remove the back up media from the DVR while the data backup is being processed. It may cause critical damage to either the media or the system."


4-2. Instant Backup

Press backup button on front panel to instantly Backup the video while watching the playback video. Instant Backup window will open up. Select Device, File Name, Audio and press Start to do the backup while playback is being continued. The Backup Icon will appear on the screen during the Playback. Press backup button one more time to stop and complete Instant Backup.

Note: "DO NOT remove the back up media while the data backup is being processed. It may cause critical damage to either the media or the system."

Note: Playback speed will be slower than usual during instant back up.

4-3. Clip Maker

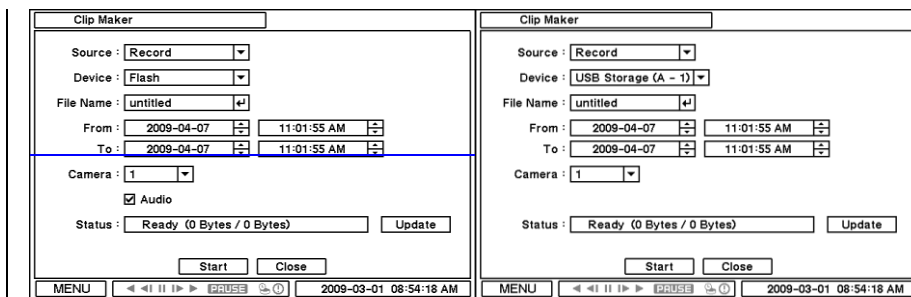

Clip Maker creates a single channel backup file that can be played on any PC with Quick Time player. Select Clip Maker option on the pop up menu in play or pause mode.

Select the backup option for Clip Maker. Press **Start** button to create Quick Time backup file.

Note: The Clip Maker file cannot be played on other programs such as Window Media Player.

Chapter 4. NEMON Remote Software

1. Using NEMON Remote Software


Note: Before using the remote software, refer to the **customer card** in the package to download the software. Please install the software on your PC once you download it.

1-1. Starting the Software

Double click on the program icon on PC to run the NEMON remote software.

Main screen of the NEMON remote software appears as shown below.

Note: A minimum resolution should be at least 1024 x 620; and it is recommended to use the software at 1280 x 1024 or higher.

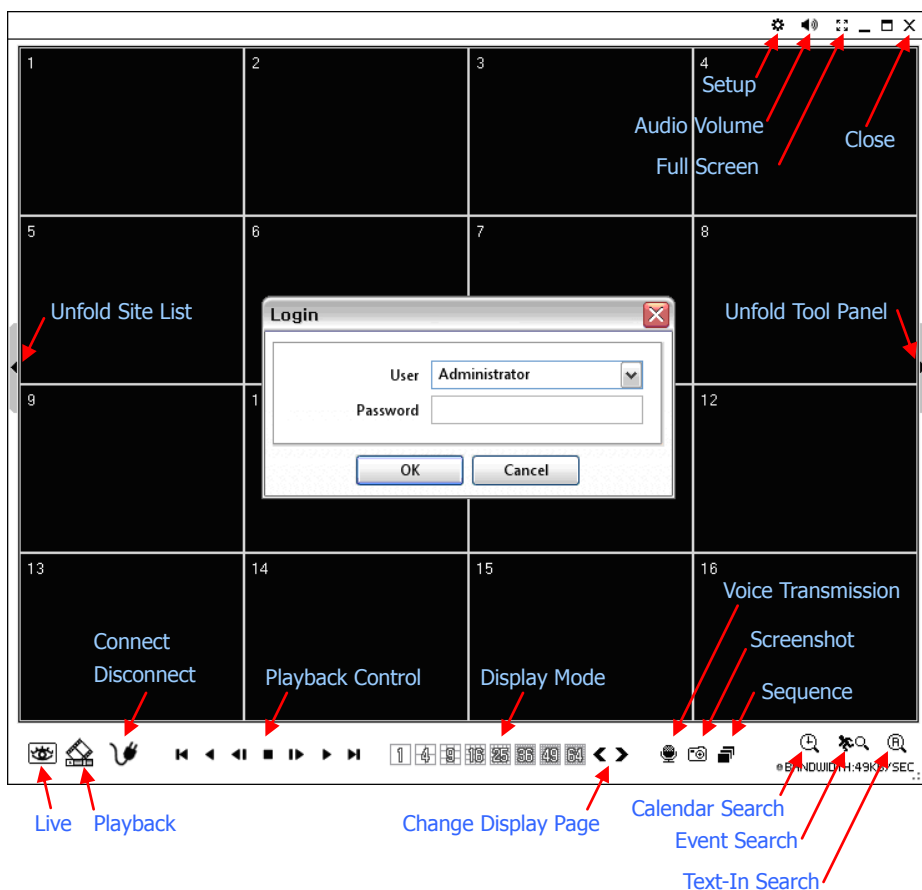

The Log In window will appear when the NEMON remote software starts. Select user as each user and user group has different access authority over the system control based on how it is configured. Enter OK once the user level is selected. The default password for any user is blank.

Live: Click the icon to enter the live mode.

Playback: Click the icon to enter the playback mode.

Connect / Disconnect: Click the button to connect a site for the live or playback mode selected.

Playback Control: Use the buttons to control the playback. (Stop, Move by Image, Play, Rewind/Forward, and Move to First/End)

Display Mode: Select display modes. (single screen, 4, 9, 16, 25, 36, 49, 64, and full screen)

Change Display Page: Change Display Mode to Previous or Next page as per the camera's numeric order.

Voice Transmission: Click the button to send audio from monitoring station to the DVR.

Screenshot: Capture the current screen and save it as an image file.

Sequence: Display images on pre-selected cameras in sequence mode.

Setup: To open the set up menu on either the NEMON software or the DVR remotely connected.

Audio Volume: Click Audio icon to open audio volume and mute panel.

Select a camera to receive Audio from the selected camera (highlighted in border lines).

Full Screen: Display the image on full screen mode.

Close: Click the box to close the software

The below options are selectable only in playback mode.

Calendar Search: Search the data using the calendar and the time line graph.

Event Search: Search the data using recorded event logs.

Text-In Search: Search the data using recorded Text-In data from POS/ATM device.



Backup: Shows backup options as below:


- **Save as MP4:** Save the data in MP4 file format.
- **Backup:** Backup the data.



Storage: To search for the data, select the storage device installed in the connected DVR. Either recording HDD or Archiving HDD can be selected for playback and search.


1-2. Site Set Up

Click **Connect** button to display registered remote locations or add new locations.

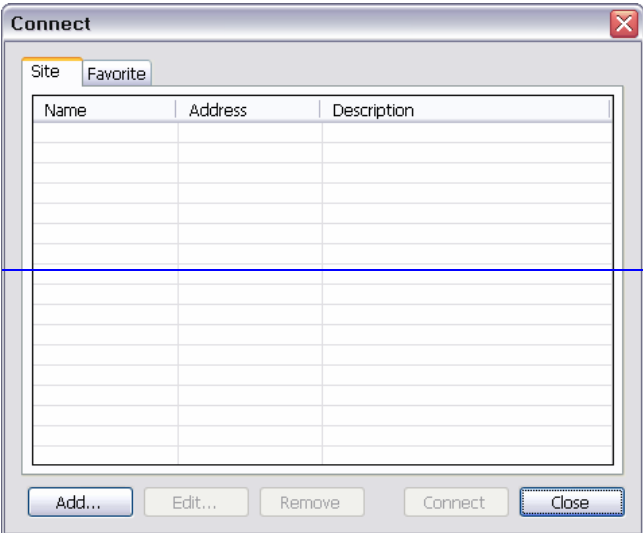

The 'Connect' dialog box features a title bar with a close button. It contains two tabs: 'Site' (selected) and 'Favorite'. Below the tabs is a table with three columns: 'Name', 'Address', and 'Description'. The table is currently empty. At the bottom of the dialog are five buttons: 'Add...', 'Edit...', 'Remove', 'Connect', and 'Close'.

Name	Address	Description
------	---------	-------------

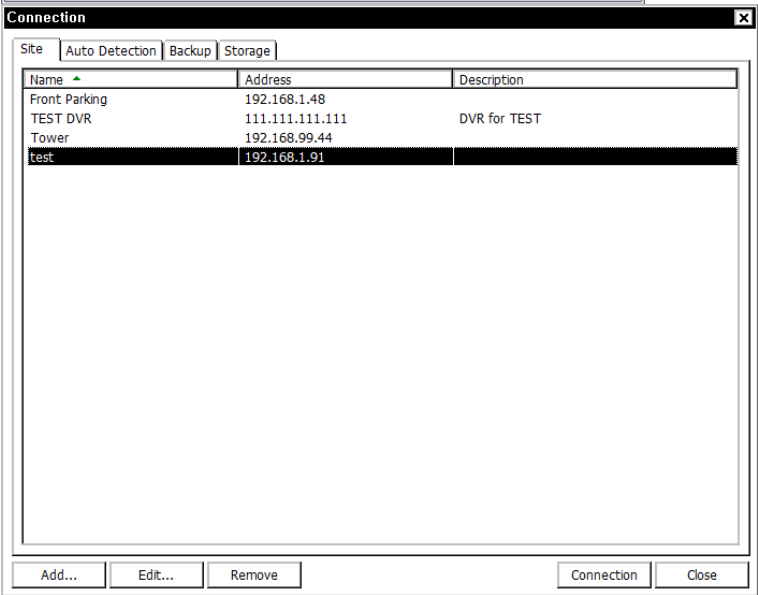

The 'Connection' dialog box has a title bar with a close button. It contains four tabs: 'Site' (selected), 'Auto Detection', 'Backup', and 'Storage'. Below the tabs is a table with three columns: 'Name', 'Address', and 'Description'. The table contains the following data:

Name	Address	Description
Front Parking	192.168.1.48	
TEST DVR	111.111.111.111	DVR for TEST
Tower	192.168.99.44	
test	192.168.1.91	

Below the table are three buttons: 'Add...', 'Edit...', and 'Remove'. At the bottom right are two buttons: 'Connection' and 'Close'.

Click **Add** button to add a remote location and to enter required information.

Add Site

Name: TEST DVR

Address: 111.111.111.111

Port: 10101

Description: DVR for TEST

☒ Auto Login

User: Administrator

Password:

Layout: No Change

OK Cancel

Name: designate a name to the site

Address: Enter IP address or domain name of the site

Port: Enter the playback port number

Description: Enter a description for the site

Auto Login: If you do not want the Log In window to be popped up every time when you start the NEMON, check Auto Login to skip User/Password authentication process

User: Select the user from the list

Password: Enter the password for that user

Layout: Select desired display layout for the site when it is connected

Note: Layout can be changed when you change the display option on the menu.


Click **OK** to save the information and complete the registration. Double click the location or Highlight it and click **Connection** button to get connected to the site.

The screenshot shows a "Connect" dialog box with a close button (X) in the top right corner. Below the title bar are two tabs: "Site" (selected) and "Favorite". A table lists three entries:

Name	Address	Description
Factory	192.168.213.112	Manufacturing Line Monitoring
LA Company Street	company.dvr dns.org www.street.com	LA Office


A horizontal blue line is drawn across the middle of the table.

At the bottom of the dialog are five buttons: "Add...", "Edit...", "Remove", "Connect", and "Close". The "Close" button has a thick blue border.

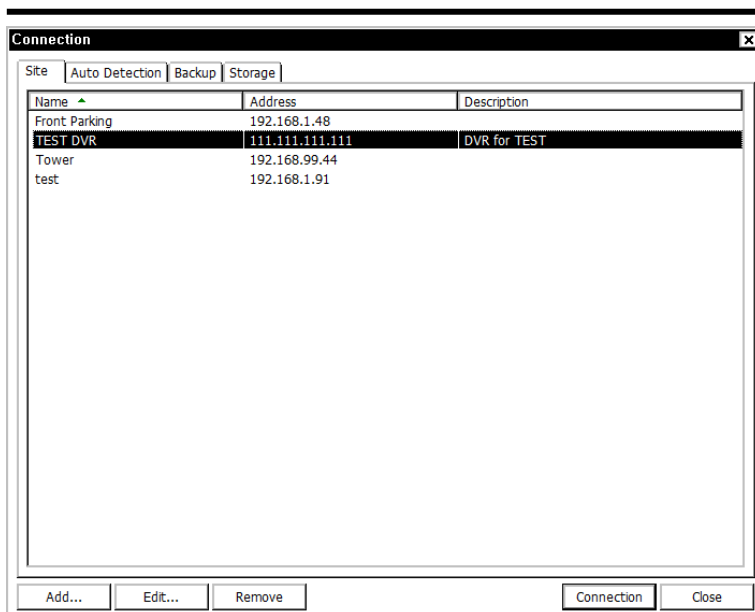

The DVR and the Client program searches for each other if they are in the same local network. The Auto Detection menu shows the DVRs detected on the same local network.


Note: This function is only available on local networks. No settings are required if both DVR and PC use DHCP. But in Static IPs mode, the DVR and PC need to have same subnet info with different IP addresses.

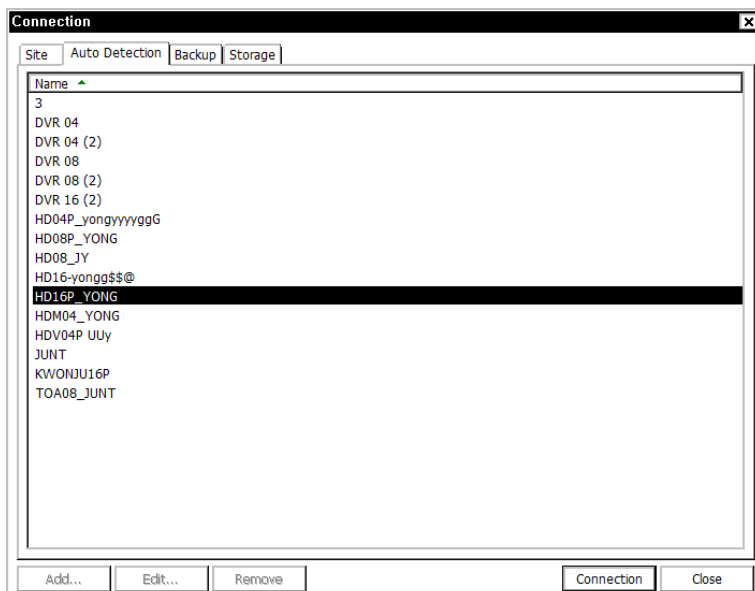


Note: Auto Detection finds DVRs on the local network automatically. To use this function, Apple® Bonjour® needs to be installed in your PC. Please refer to <http://www.apple.com/bonjour> for more details.

1-3. Favorite Set Up


Favorite function allows managing multiple sites. Up to 64 different cameras and sites can be monitored and managed on one screen. Select **Favorite** tab.

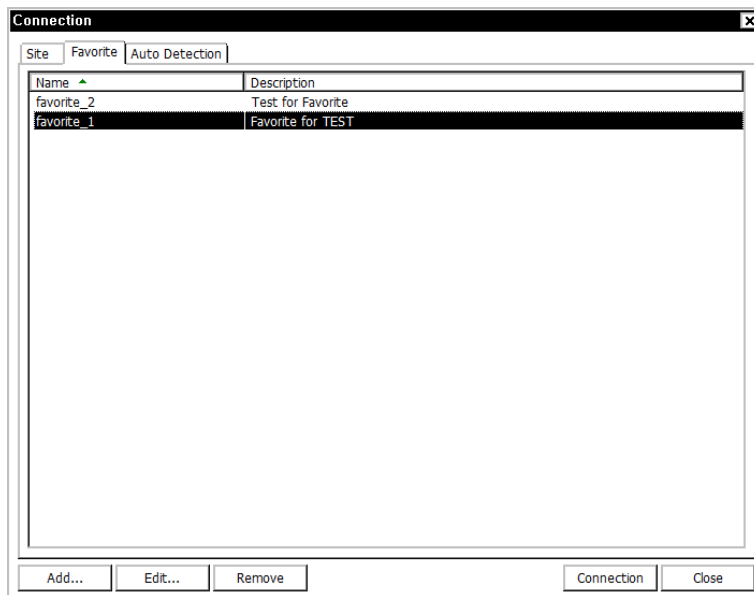


Click **Add** button to group multiple sites as one favorite group.

Enter the group's name and description. Up to 64 different cameras in different sites can be grouped and displayed together. Select sites and cameras from the drop down list by clicking  button.


Note: Sites should be registered under 'Site' menu before setting the favorite group.

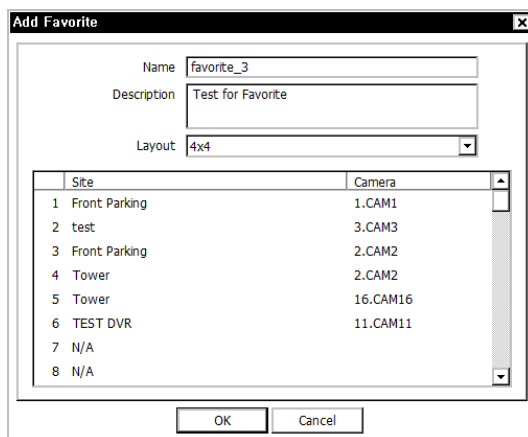

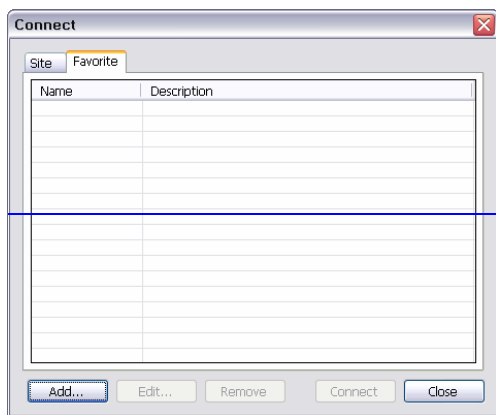

1-3. Site List Panel

The remote sites also can be registered on Site List Panel. Use **ADD** , **EDIT** , **REMOVE** buttons at the bottom to register and manage the remote and favorite sites.

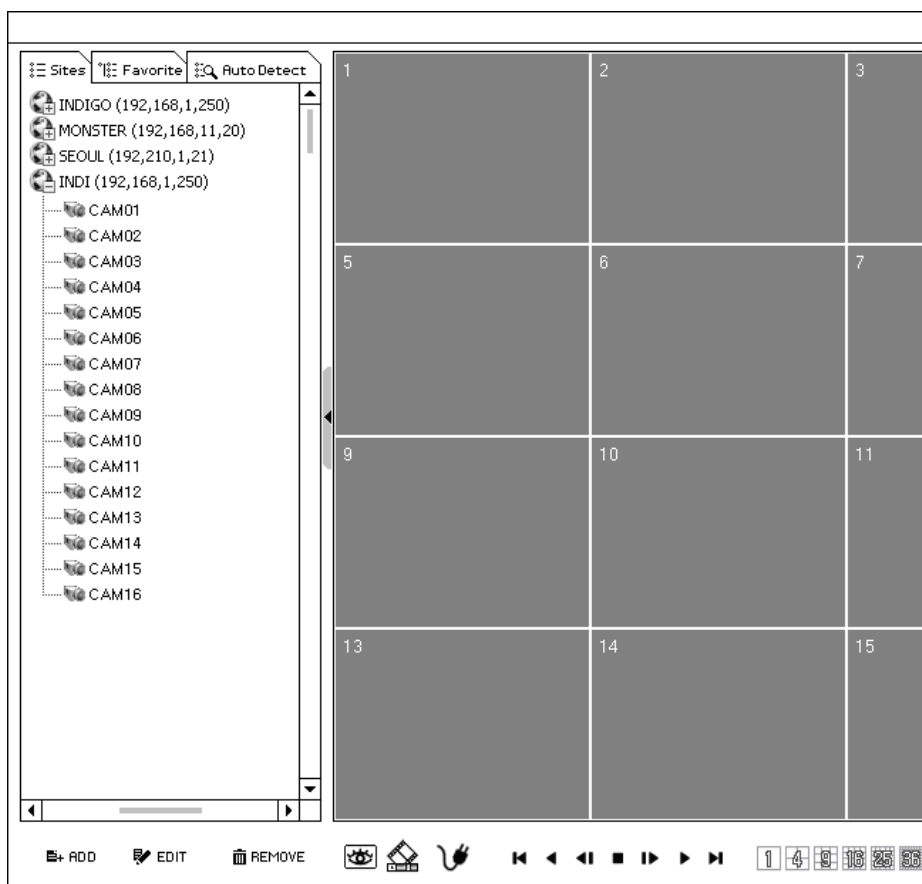


Drag and Drop the listed sites or cameras onto the display section to connect to and display them. Each camera can be dragged and dropped for independent display. This allows making a display by a group of cameras from the different sites.

Once the group of cameras from the different sites has been set, move to Favorite tab to save the current display setting as a new Favorite site.

Note: Cameras can only be dragged and dropped onto display section in Sites Tab. (not in Favorites and Auto Detect Tab)


Note: Camera positions (CH locations) can be dragged and dropped to desired locations.

1-4-3. TEXT-IN

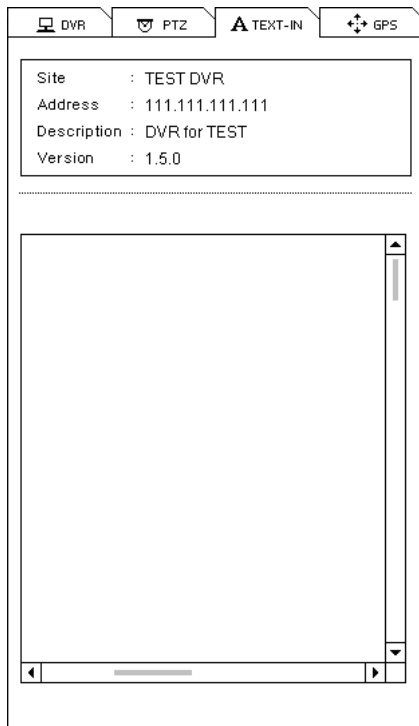

Displays recorded TEXT-IN info. TEXT-IN tab is activated in playback mode only.

1-4-4. GPS

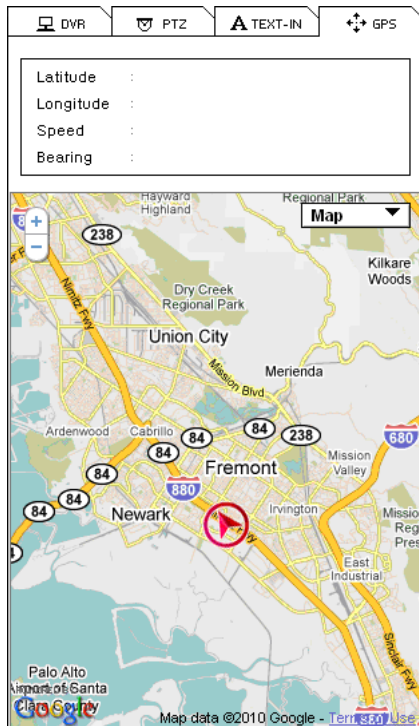


GPS is for Mobile DVR tracking in playback mode. GPS data from built in GPS on Mobile DVR is recorded with images. This data will be displayed on Google Map in playback mode.

Note: the GPS function isn't used for this DVR.

2. Remote Playback

2-1. Calendar Search

Calendar Search Panel opens when a site is connected with playback mode as shown below. Time bar will appear once the date is selected, and an image preview will appear when specific time is selected on the time bar.

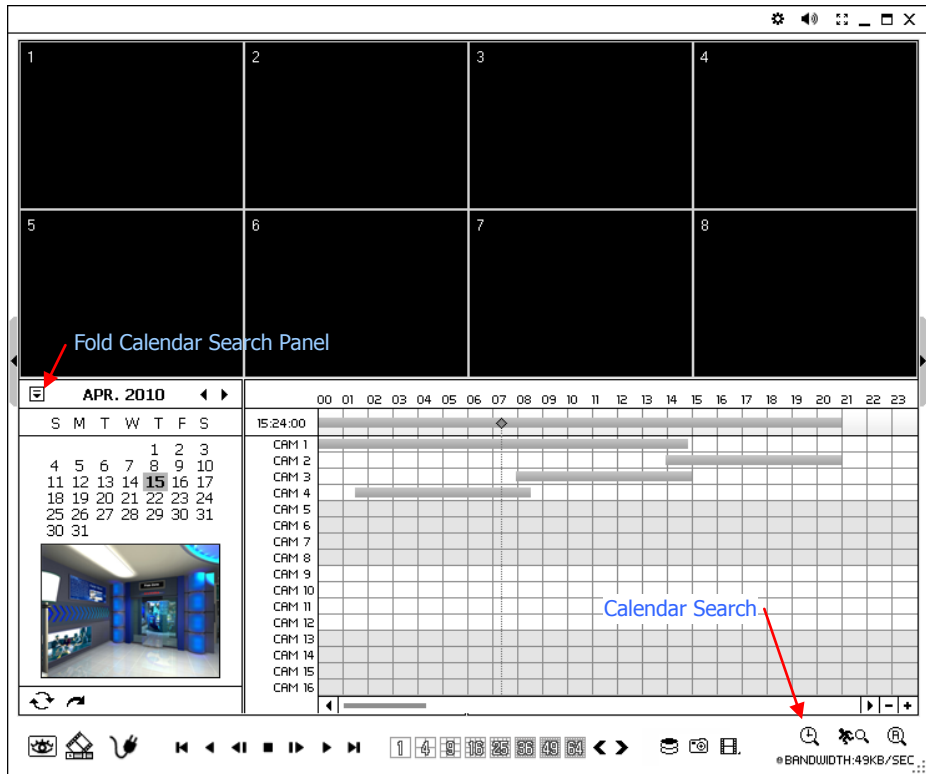


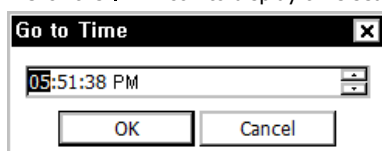
Use below buttons to control the playback image.


Playback Control Button

- ⏮ Beginning
- ⏪ Reverse Play / Rewind
- ⏴ Step Backward
- Stop
- ⏴ Step Forward
- ⏩ Play / Fast Forward
- ⏭ End

Go To Time


- Click the  icon to display time search window. Enter specific time to search the data



- Click  icon to refresh and update the calendar info.

2-2. Event Search

Select Event Search on the bottom of the screen to open Event Search Panel. Enter Date, Event Type, etc. and select **SEARCH** button to retrieve the search results.

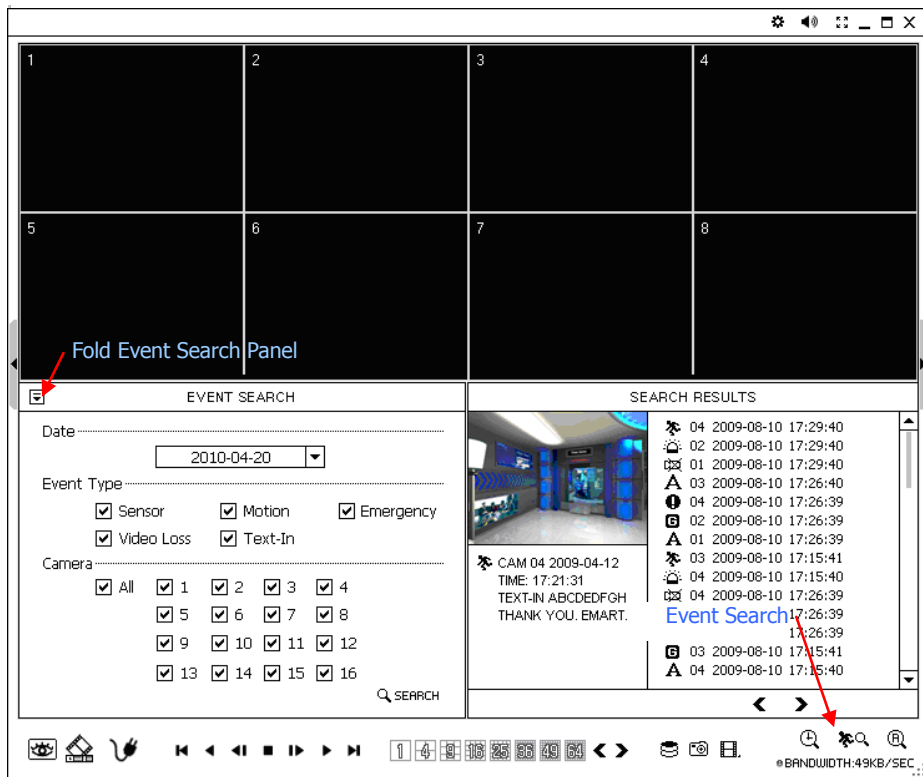


Select an event from the list to playback the video. Search through the list using < > buttons.

Select the date to search an event in the Date list. Select All or specific camera numbers for related event search. The Event type can be selected from the list for detailed search.

2-3. Text-In Search


Select Text-In Search on the bottom of the screen to open TEXT-IN Search Panel. Enter Date and Text, and select **SEARCH** button to retrieve the search results.

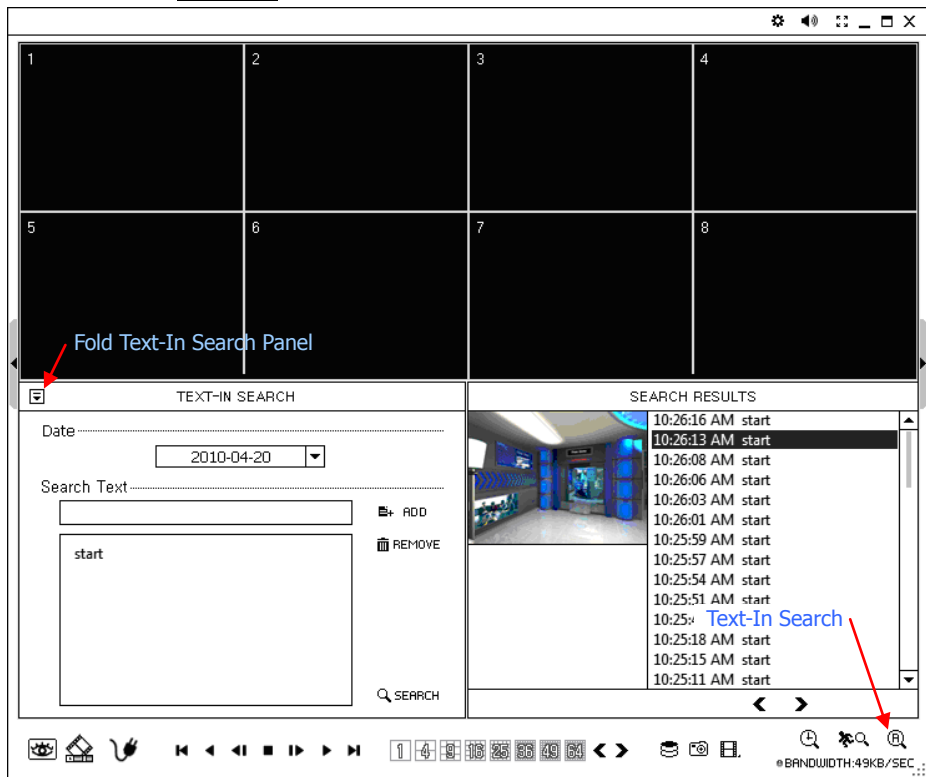


Select a text-in event from the list to playback the video. Search trough the list using < > buttons.


2-4. Saving the recorded data


Screenshot

Select  button to capture the current image during the playback as show below. Select **Save...** button to save the image. The Image can be saved in JPEG, BMP and PNG format.

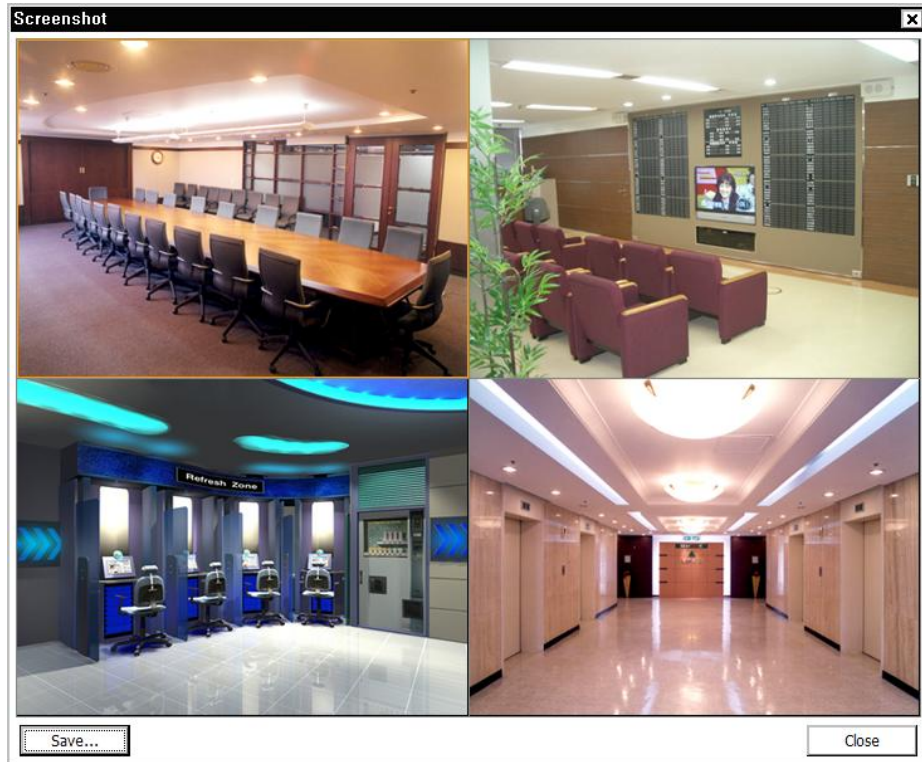


Save as MP4


Select  button during the playback, and select "Save as MP4" to open the window as shown below to save the data in MP4 format.

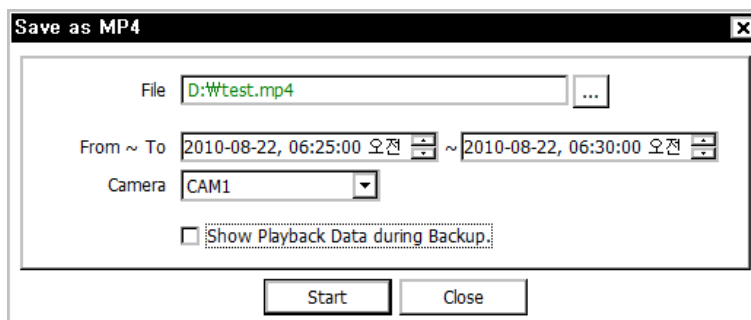

- Enter file name and select Location.
- Select the time period.
- Select Camera number. Press Start to create MP4 file.

Backup

Select  button during the playback and select "Backup" to open the window as shown below to save data in the strg file format (a video format provided by the DVR).

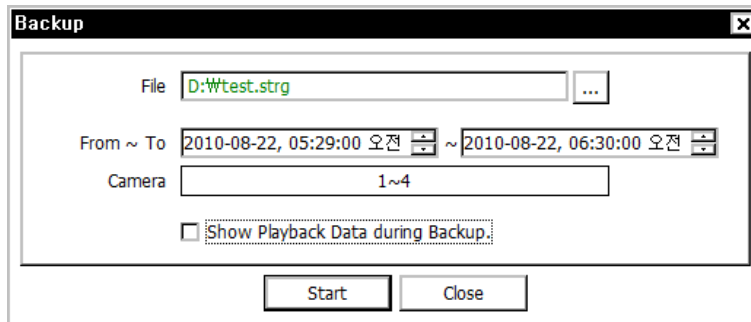


The Backup dialog box contains the following fields and controls:

- File:** A text field with "D:\test.strg" and a browse button (...).
- From ~ To:** Two date/time pickers showing "2010-08-22, 05:29:00 오전" and "2010-08-22, 06:30:00 오전".
- Camera:** A text field with "1~4".
- Options:** A checkbox labeled "Show Playback Data during Backup" which is currently unchecked.
- Buttons:** "Start" and "Close" buttons at the bottom.

- Enter file name and select Location.
- Select the time period.
- Select Camera number(s). Press Start to create Backup file.

2-5. Play Backup Data

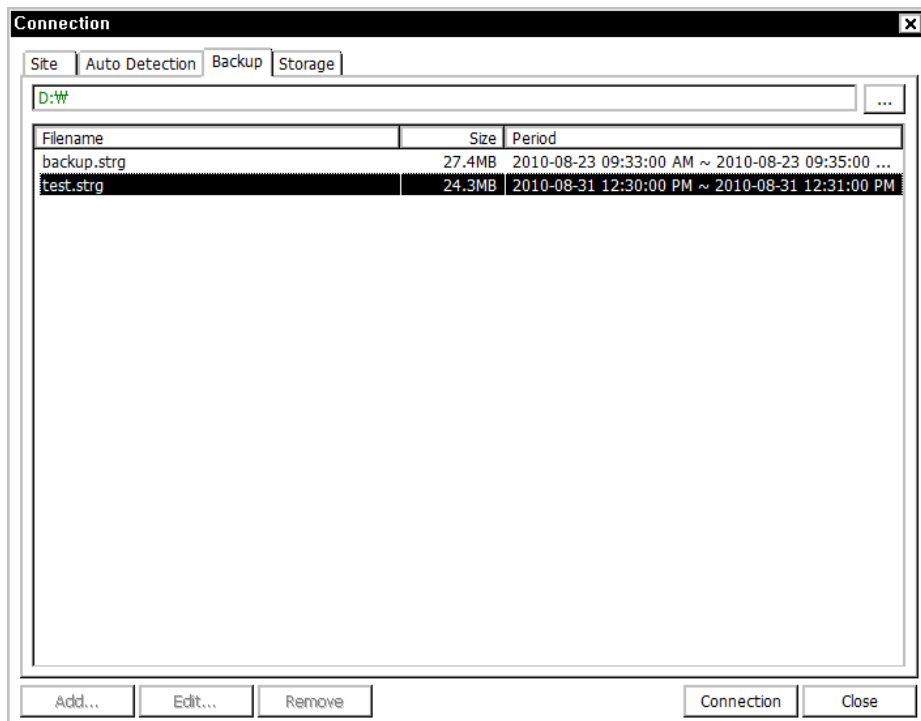


The Connection dialog box has tabs for "Site", "Auto Detection", "Backup", and "Storage". The "Storage" tab is active, showing a list of backup files.

Filename	Size	Period
backup.strg	27.4MB	2010-08-23 09:33:00 AM ~ 2010-08-23 09:35:00 ...
test.strg	24.3MB	2010-08-31 12:30:00 PM ~ 2010-08-31 12:31:00 PM


At the bottom of the dialog are buttons: "Add...", "Edit...", "Remove", "Connection", and "Close".

Data backed up from the local site can be played on the remote software.


Select  button in playback mode, and above window will appear. Select the location where the data is saved. Select the file and click **Connection** to play the video.

Note: Recorded Audio can be played on single screen mode only.

2-6. Play Independent HDD Data on PC

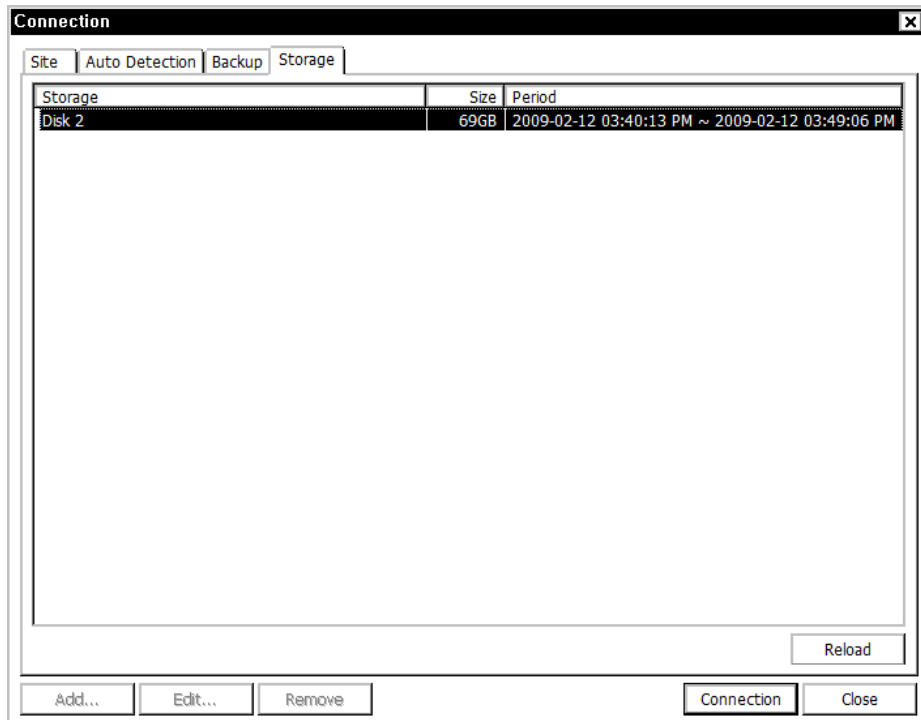


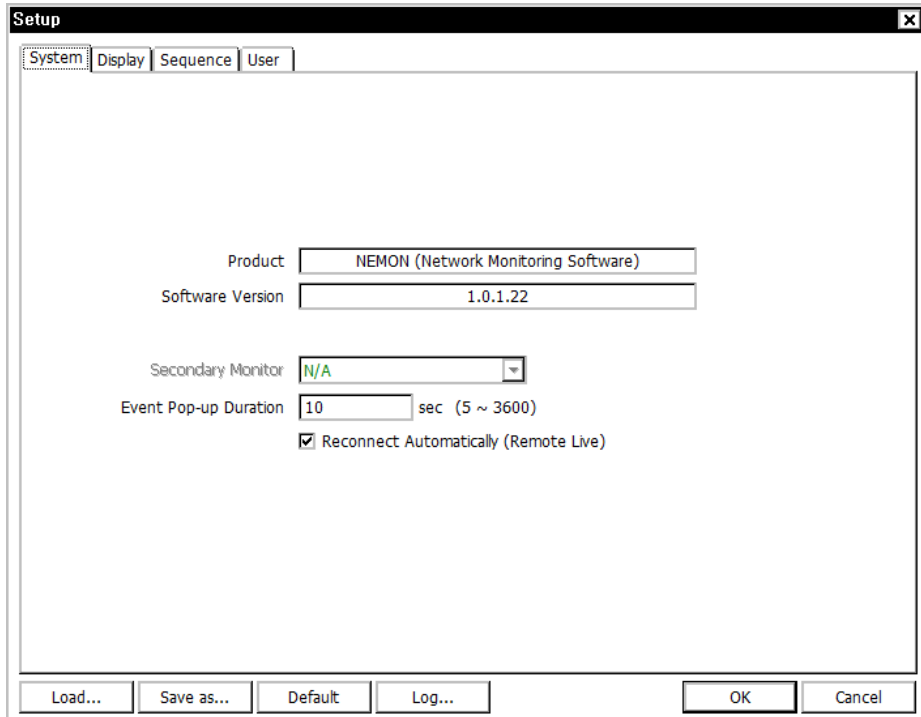
Data in the HDD (taken out from this DVR product) can be played on PC using NeMon. Connect the HDD to a PC using a SATA to USB connector cable if necessary. Make sure the HDD is connected properly.

Select  button in the playback mode. Click **Storage** tab to display HDD information (if HDD is not shown please click **Reload** button to refresh the list). Double click the list or highlight and click **Connection** button.

3. Setup

3-1. Remote Software Setup

Click on  and **Setup** to enter setup menu.



Setup

System | Display | Sequence | User

Product: NEMON (Network Monitoring Software)

Software Version: 1.0.1.22

Secondary Monitor: N/A

Event Pop-up Duration: 10 sec (5 ~ 3600)

☒ Reconnect Automatically (Remote Live)

Load... Save as... Default Log... OK Cancel

Product: Displays general information of the S/W

Software Version: Displays current S/W version

Secondary Monitor: Select the secondary monitor if using multiple monitors

Event Pop-up Duration: Set the duration for the camera to be displayed in full screen in the event situation.

Reconnect Automatically: Set auto reconnection on Live mode in case of disconnection for any reason.

Load: Load saved configuration data.

Save as: Save current configurations

Default: Reset to default configuration

Log...: Displays the history of S/W usage

Click on Display tab to enter display setup menu.

Setup

System Display Sequence User

☒ Maintain Aspect Ratio (4:3)
☒ Use Alpha-Blending
☒ Video Acceleration (Overlay)

Language English

Date/Time Format Year-Month-Day 12 Hours

2010-08-31 06:21:32 PM

Load... Save as... Default Log... OK Cancel

Maintain Aspect Ratio (4:3):Keep the 4:3 ratio for the display screen

Use Alpha-Blending: Enables alpha-blending effect on S/W UI


Video Acceleration: Video Acceleration option enhances natural live image display on the client S/W. Please be aware that this may cause live images to be displayed improperly. Some PC's graphic card does not support and is not compatible with this option.

Note: Some graphic cards do not support such functions. In this case, please unselect the option as it might result in abnormal system operation.

Language: Select language option

Date/Time Format: Select Date/Time Format


Click on Sequence tab to enter Sequence Setup menu.

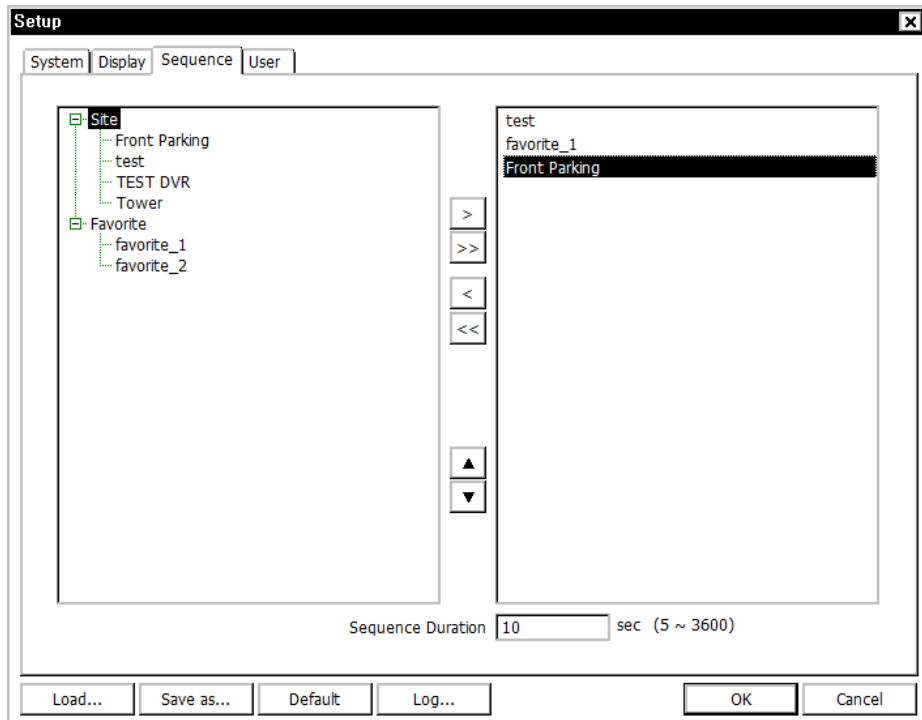


Activate sequence mode and select sites to be sequentially displayed from the registered or Favorite sites. Click the site and select button to add the site to the Sequence list. button will move the all sites to the sequence list.

Sequence Duration: Set interval for the sequential display.


Click on User tab to open user setup menu.

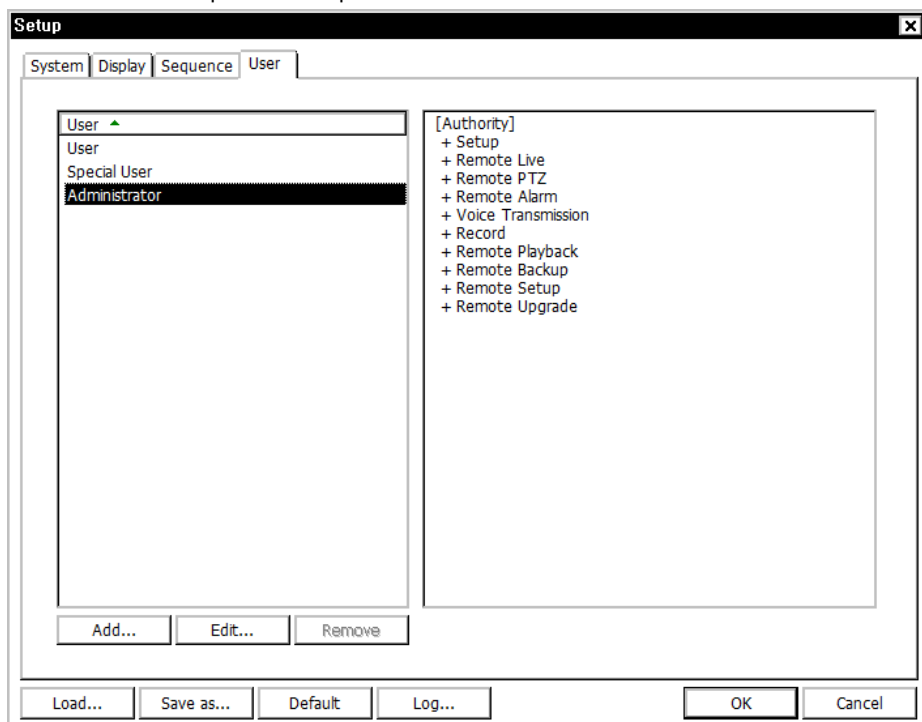


Register the remote users. Each user needs to use their own password when they log in. Select **Add** to start registering a new user.

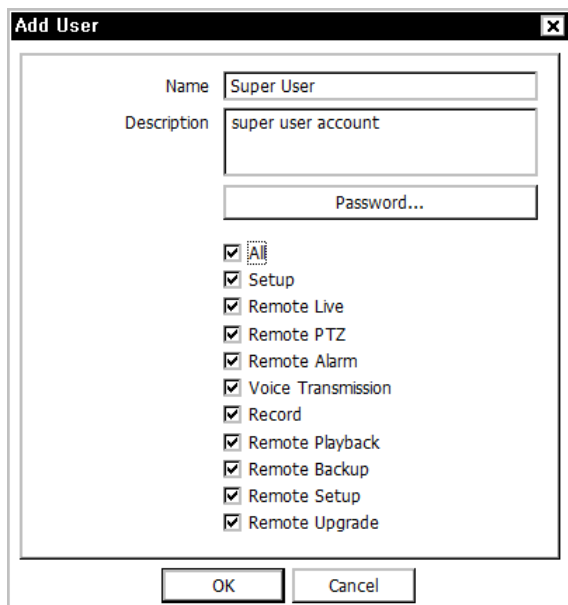


3-2. Remote DVR Setup

Click on  and **Remote Setup** to open Remote Setup menu.

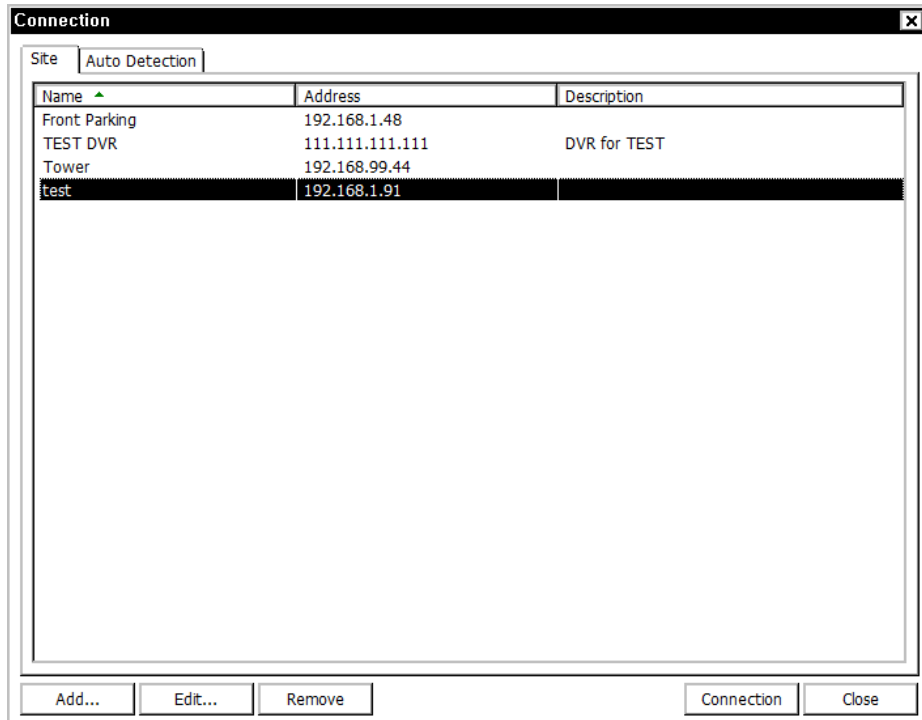


Select a DVR to setup and select Connection button. Setup menu will appear as show below once it is connected

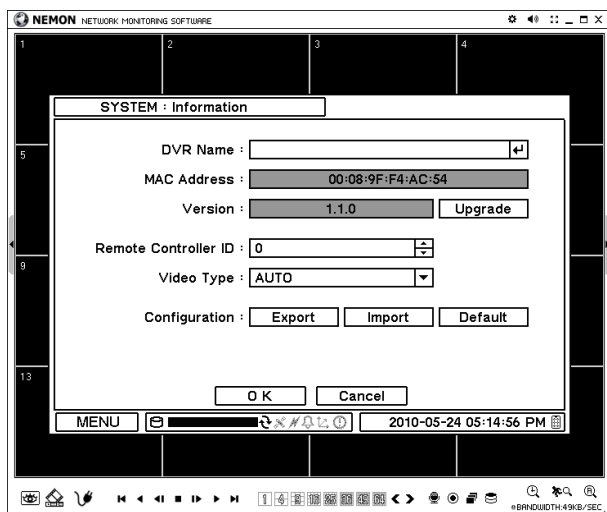


Note: The Setup menu opened in the remote site will look the same to the setup menu at the DVR's physical location. This is to make the users easily use the setup menu no matter where they are controlling the DVR from.

3-3. Remote Upgrade

You can upgrade the DVR system from a remote location on your PC using NEMON.

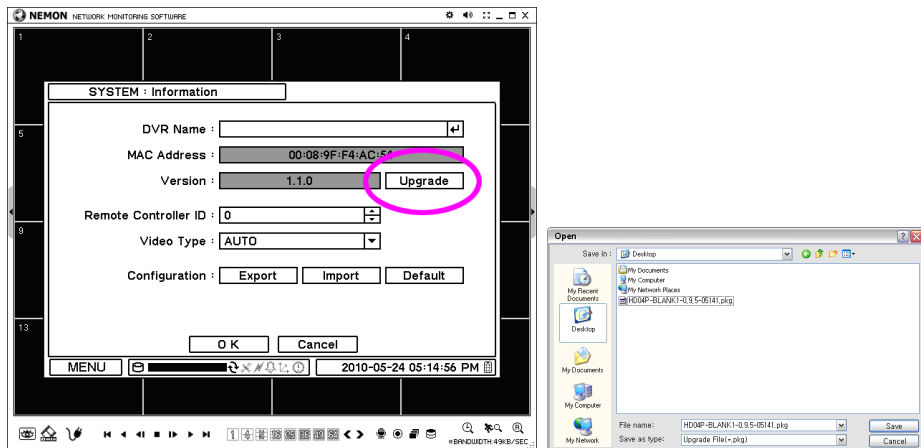

- Click on  and **Remote Setup** to open Remote Setup menu.
- Select **Information** under System.
- Click **Upgrade** next to S/W version to browse for the file for upgrade
- Select the file location and the file to upgrade the system.

Note: Please do not exit NEMON or power off a computer until the system upgrade is completed.


Start-> Program -> remote software folder -> Callback

Callback icon will be displayed on the bottom right of Window once the program starts.



Callback message will be displayed/notified as shown above.


Click Callback icon to display main window of Callback as shown below.

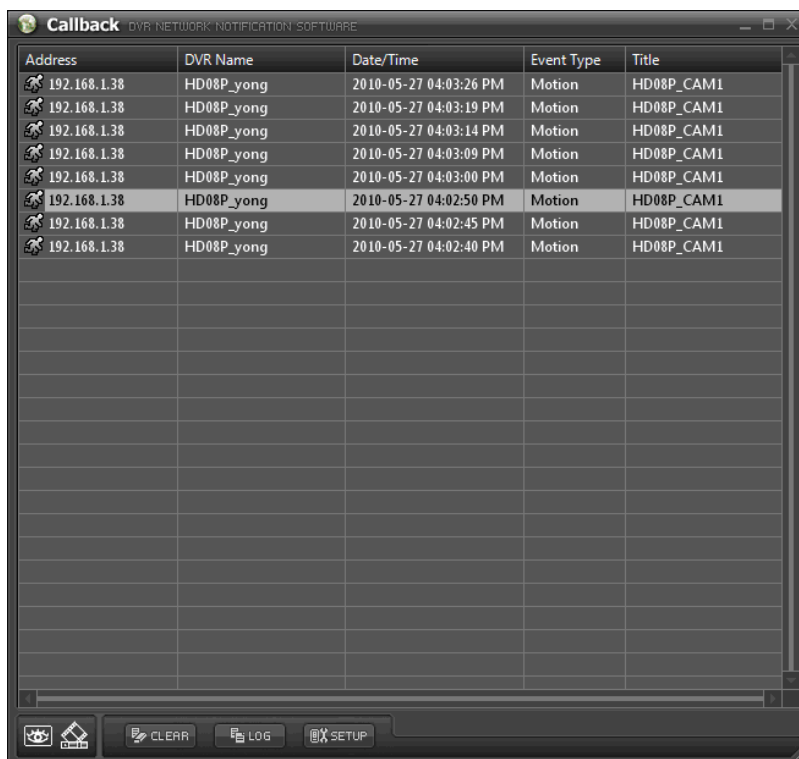

Select a log from the list and click Live or Playback icon image to connect related DVR.


Clear: Clear all the logs listed on Callback window

Log: Click Log button to display log search window as shown below.

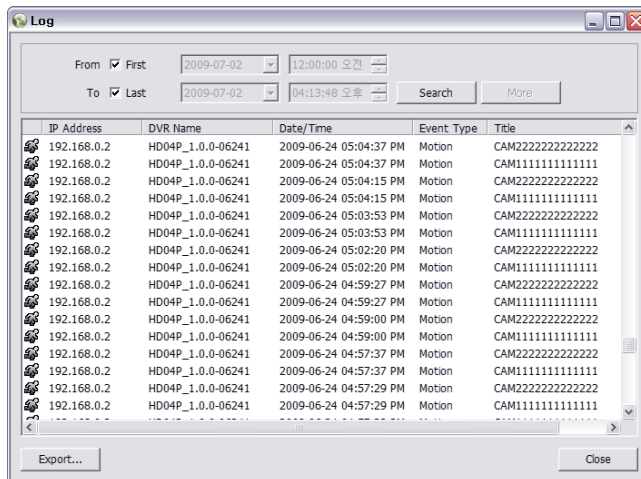

Up to 100,000 log can be saved. 1,000 log lists will be displayed per search. Click More button to display next 1,000 logs. Click Export button to save searched logs in either txt or csv format.

Setup: Click Setup button to set a port for Callback. Check Run Callback at Startup of the System box to start Callback program automatically with Window.

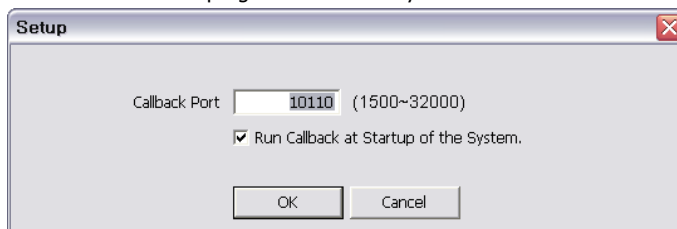

Note: UDP port needs to be set (open) to transmit Callback if Firewall is being used.

Appendix A. Remote Access Using I.E.

Users can access the DVR's Setup, Live Web Monitoring, and Playback functions through a Internet Explorer.

4-1. Login

Open up internet explorer window. Users can access to the DVR's Remote Monitoring System by entering DVR's IP address or its registered hostname in the Internet Explorer's address bar.

Ex) When web port is 80(by Default) – <http://hostname.autoipset.com> or 211.104.176.143


Ex) When web port is not the default value – http://hostname.autoipset.com:Web_port or

211.104.176.143:Web port Ex) <http://hostname.autoipset.com:8080> or

211.104.176.143:8080

Port numbers can be checked at DVR MENU > Network > Address > Port

Note: Web Viewer is supported only on Internet Explorer 7.0 or above.

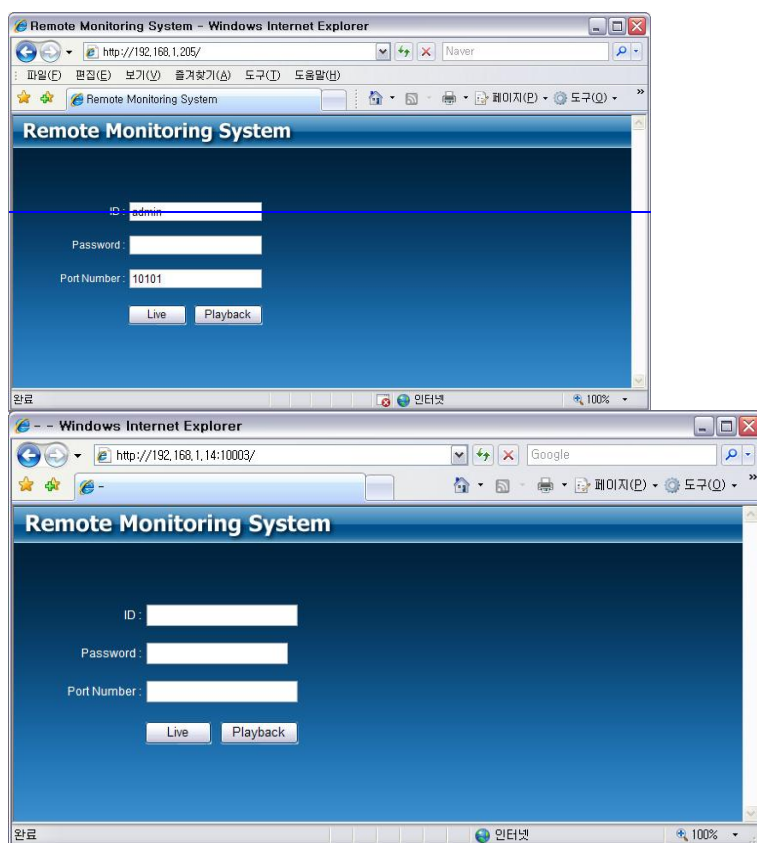

At the DVR's login page, User should input correct ID, Password, and Port Number in order to access Live or Playback function of the DVR.

- **ID** : DVR's Administrator ID or User ID (Default ID: admin or user)
- **Password** : DVR's Password for the administrator or a user (Default Password : "1111")

- **Port Number** : DVR's Port Number (Default : 10101)
*If you need more information about the Port Number, please check the following Section of this manual. - "3-5-1. MENU > Network > Address > Port "
- **Live** : Live Monitoring through the web
- **Playback** : Search and Play the DVR's recorded data

Note: Please install Active X when Internet Explore displays Active X installation message.


4-2. Live

In live window, users can view the live video and go into the setup Menu



Icons in live Mode

- : One Channel View Mode.
- : Select the channel to display in One Channel View Mode.
- : Quad View Mode.
- : Full screen View Mode.
- **Setup**: Open the DVR's setup Menu.(administrators only)

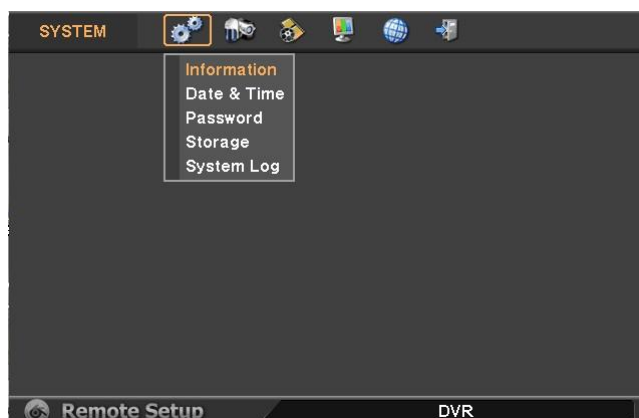

4-3. Playback

User can search and play the DVR's recorded data.



● Icons in Playback Mode

: Backward High-Speed Play(X2, 4, 8, 16, 32)

: Forward High-Speed Play(X2, 4, 8, 16, 32)

: Jump to the beginning of data at the selected date

: Jump to the end of data at the selected date

: Pause

: Backward Play

: Forward Play

: Backward Play by one frame

: Forward Play by one frame

4-3-1. Calendar Search

User can select a specific time to play from the calendar displayed.



As you see from the picture, date is marked red when there is a recording. In addition, a selected date is highlighted with yellow.

, : Change month / year


: Search data by entering a specific time.



: Refresh the DVR's recorded data information.


4-3-2. EVENT Search

User can search from the recorded events using the Event Search function.

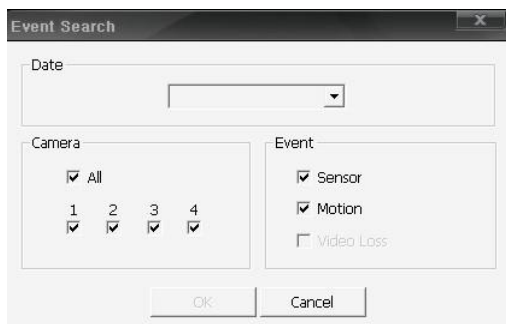Click the Event Search button to open up Event Search window, then click on the date. Finally, select the event that you want to search for on the Event list.



  : Change the Event List pages

 : Event Search on different date

Note: Web viewer may not display videos properly if the user use low performance video cards, especially an on-board type.

Appendix B. How to set DDNS using router

(DDNS will not work when DVR is directly connected to ISP or ADSL)


1. DDNS(Dynamic Domain Name Server)

Dynamic DNS (DDNS) allows you to create a hostname that would be linked to your dynamic or static IP address (of IP Camera, DVR, or a Web Server). This server will automatically keep updating the IP address of the network connected to the DVR so the host name is properly linked all the time. You can get this DDNS service by signing up at autoipset.com.

1-1. Using DDNS service by logging into autoipset.com

1. Sign up at autoipset.com

Go to <http://www.autoipset.com>. The autoipset.com DDNS service page will open up as shown below.

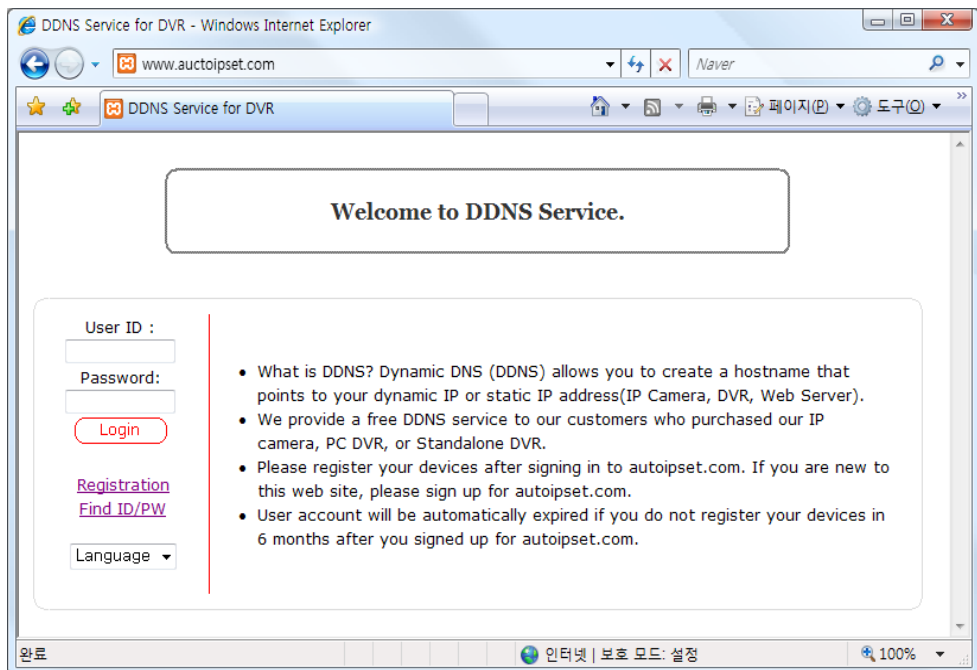

Click "Registration" to sign up.

User ID : [Check ID]
 (Up to 20 characters)

Password : Confirm :
 (Up to 20 characters)

Name :
 (Up to 20 characters)

E-mail :
 (Please input an E-mail address that you want to get your password info when you forgot your password.)

Fill up the blank with correct information, and then click submit button. Before submission, check to see if your ID is available by clicking "Check ID".

2. Log in

Please log in with your ID and Password.

When you log in, you can see the list of your registered DVRs as shown below at the product list.

DDNS Service for DVR - Windows Internet Explorer

www.autoipset.com/user/list.php

DDNS Service for DVR

User List

Product List

Edit User Info

Log out

	Hostname	Public IP	Status
<input type="radio"/>	dvr1.autoipset.com:80	211.104.176.100:80	●
<input type="radio"/>	dvr2.autoipset.com:80	211.104.176.101:80	● [delete]

※ If you click your hostname, it will directly open your IP Camera, DVR, or Web Server page.

※ If you want to delete your registered hostname, please click [Delete] key after selecting the hostname.


The last connection time with DDNS	
●	In 5 minutes
▲	Between 5 and 20 minutes
●	More than 20 minutes
×	Naver connected to DDNS

관리 인터넷 | 보호 모드: 설정 100%

3. DDNS registration

Please open DDNS menu at your DVR in the following route.



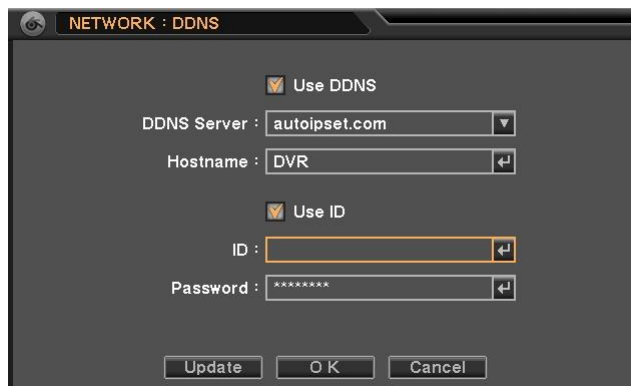

DVR > MENU > NETWORK > DDNS







First, enter a unique hostname you want to use, and check the Use ID check box.

Next, input ID and Password that you registered at autoipset.com, and click "Update" button. The registration process is completed if you see the message, "DDNS: Succeeded in updating".

4. DDNS Management

Status	Specification
	The last update was done less than 5 Minutes ago.
	The last update was done 5 to 20 minutes ago.
	The last update was done more than 20 minutes ago.
	No update history

5. Delete the registered DDNS


	Hostname	Public IP	Status
	dvr1.autoipset.com:80	211.104.176.100:80	
	dvr2.autoipset.com:80	211.104.176.101:80	

[delete]

Please select the DVR's DDNS that you want to delete, and then click "Delete" button.

5. Router Configuration

- Insert the gateway address on the explorer to connect the homepage for the Router.
- Go to "Port Forwarding" Menu. (The picture below is for particular Router.)

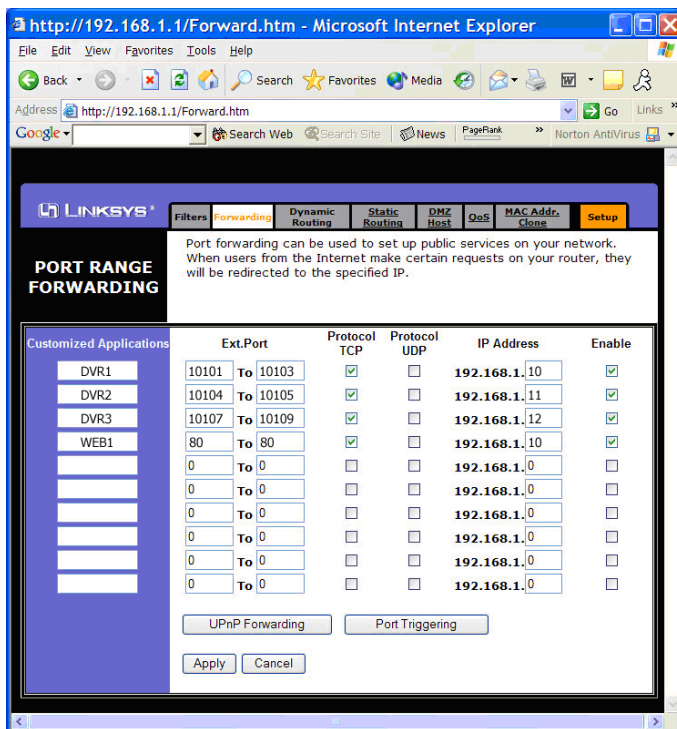

- Please insert the IP address and Port number for DVR in the Port Forward menu.
- The Port number which you insert at this point make it possible to distinguish each of DVRs
- Specify the WEB port number to access the DVR with Internet Explorer. Default port number is 80.

6. DVR Configuration

Example of DVR Network setting.

NETWORK : Address

Address Port

Type : Static IP

IP Address : 192 . 168 . 1 . 10

Subnet Mask : 255 . 255 . 255 . 0

Gateway : 192 . 168 . 1 . 1

DNS Server : 8 . 8 . 8 . 8

ID :

Password : *****

OK Cancel

MENU 99% 2009-12-17 04:49:45 PM

Select Static IP option and enter following options accordingly. Then the network should assign an dedicated IP address to the DVR.

NETWORK : Address

Address Port

Network Port : 10101 (1500 ~ 32000)

Web Port : 80

	Port
Live	10101
Playback	10102
Setup	10103
Web	80

OK Cancel

MENU 2010-03-23 05:19:59 PM

Make sure the ports for DVR are all set accordingly or set network ports according to DVR port settings.

1-2.Using DDNS without logging into autoipset.com

Please open DDNS menu at your DVR in the following route.

DVR > MENU > NETWORK > DDNS

NETWORK : DDNS

☒ Use DDNS

DDNS Server : autoipset.com

Hostname : DVR

☐ Use ID

ID :

Password :

Update O K Cancel

Enter a unique hostname that you want to use, and click "Update" button. The registration process is completed if you see the message, "DDNS: Succeeded in updating."


Appendix C. Digital Signage Maker

Digital Signage Maker converts any video files into DVR's Digital Signage format (JPG).

Digital Signage Maker Options and Limitations. (Before/After Conversion)

	Video File	Digital Signage File
Conversion	Video Files	JPG
File Name	No Limits	<i>Filename_00001.JPG,</i> <i>Filename_0002_JPG ~</i>
File Size	No Limits	256KB per each JPG File
Video Type (Size)	No Limits	Select either NTSC (704 x 480) or PAL (704 x 576)
FPS	No Limits	15 FPS only
Supported File Extensions	All File Extension except JPG, BMP, and JPEG is supported	JPG
Supported Codecs	MPEG(Moving Picture Experts Group) MOV(QuickTime) AVI(Audio Video Interleaved). WMV DAT ASF MP4 Etc.	JPG

1. How to use Digital Signage Maker

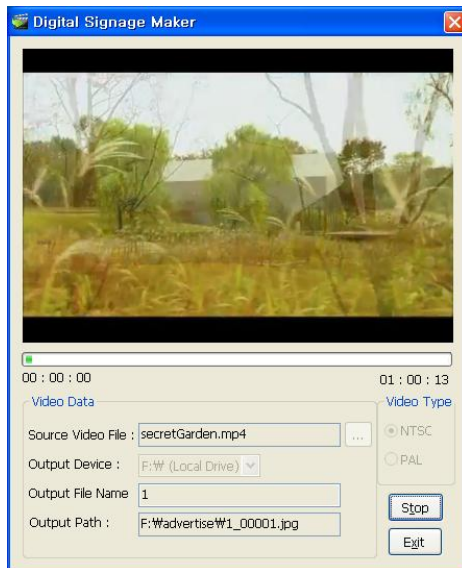

a. Select Source Video File

Files with extensions such as JPG, BMP, JPEG are not supported.

Please refer to above list for right file formats.

b. Select Output Device

Existing Logical drive or Removable device is displayed as Drive Name.

DeviceName\advertise is a default file folder name that MUST be changed or renamed.

If the \advertise folder is already created, it doesn't make a new folder and overwrite the existing one.

c. Enter Output File Name

Enter file name. The file name is automatically created with numbers in order as follow:

E.g. filename_000001.jpg, filename_000002.jpg and

d. Select Video Type

The file can be saved as NTSC(704 x 480) or PAL(704 x 574) according to Video Type. But this does not affect the display resolution.

e. Click Start Button

Click the start button. Play time and End time of Video File are shown under progress bar.

The Video conversion process will be displayed on the window.

If Stop the process during the conversion, it will end and complete the conversion process up to the stopped point.

F. Import Digital Signage File into DVR

Create a folder by name of 'advertise' and save the files in that folder in USB flash memory. Files must be saved in the folder and the folder name should be 'advertise'. DVR will not recognize any other folder names. Once it is done, connect USB flash memory to DVR and follow Digital Signage instructions (Import) to use Digital Signage features.

(refer to Chapter 3. 2-3-4. Digital Signage for the detail)

Appendix D. PFRM Instructions (PC Free Remote Monitoring)

1. Outline

It allows a direct remote connections on LIVE/PLAYBACK between DVRs without a PC by connecting a DVR remotely from another DVR.

Note:

- PFRM supports its feature in same models and later models are not applied.

ED04 → ED04 (connecting is available) ED08 & ED16 (not available)

ED08 → ED04 & ED08 (available) ED16 (not available)

ED16 → ED04 & ED08 & ED16 (available)

- Audio and PTZ are supported. (Supports Audio in single screen mode)

- Text-in Scroll is not supported.


- Backup option is not supported on Remote Playback.

- Auto Detection is not supported.


2. How to connect

A. Live & Playback Mode


Follow the direction "Remote -> Live or Playback" in Contextual Menu on Live.

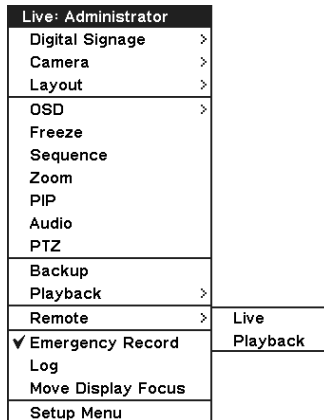

The system is switched to Remote Live or Playback Mode and the list of Remote Site(up to 100 sites) is displayed on the screen.

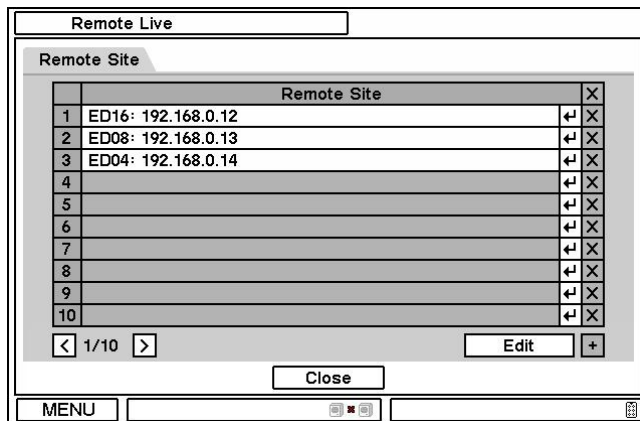

Select a site that user wants on the Remote Site List. By selecting Edit button, user can add Remote Site by pressing **+** button or delete the site by **X** button.

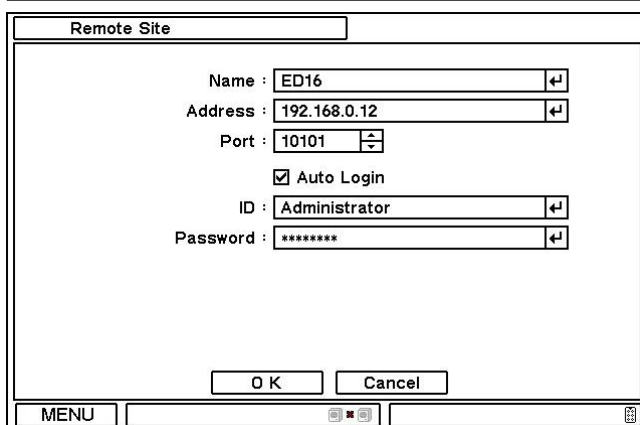

Remote Site

Name : ED16

Address : 192.168.0.12

Port : 10101

☒ Auto Login

ID : Administrator

Password : *****

OK Cancel

MENU


Name : Enter the Site name.

Address : Enter the Site address for Remote DVR.

Port : Enter Port for the site. It depends on the network setting of the local site.

User / Password : Enter User and Password to log in. User has to be set with authority of Network.

After the editing is done, click Done button.

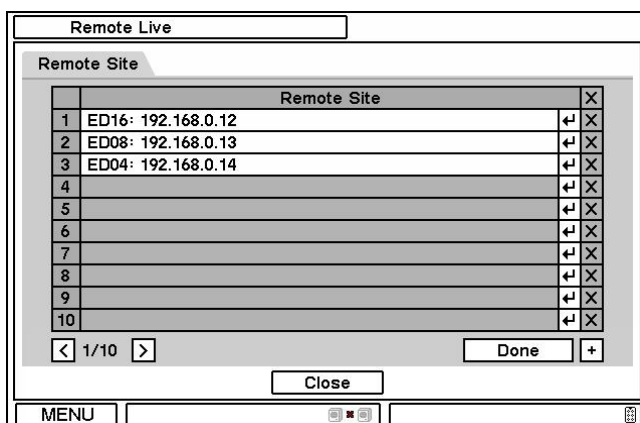

Remote Live

Remote Site

	Remote Site	
1	ED16: 192.168.0.12	X
2	ED08: 192.168.0.13	X
3	ED04: 192.168.0.14	X
4		X
5		X
6		X
7		X
8		X
9		X
10		X

< 1/10 >

Done +

Close

MENU

B. PTZ Mode

Click the right button of the mouse or the arrow shape in the middle of remote controller on Remote Live Mode and select Remote PTZ.

Appendix E. NEMON Network Archiver

Instructions

1. Outline

NEMON Network Archiver is a Remote Archiving Program to keep recorded data from DVRs on remote sites via Network.

2. Feature


The S/W can be used without any additional upgrade of the DVRs.

Archiving can be simultaneously performed with multi sites registered.

The S/W offers flexible storage management by creating, adding or deleting Storage File as much as user wants regardless of the size and numbers.

3. How to use Network Archiver

Start Network Archiver(Archiving) by using Schedule Wizard(New Schedule).

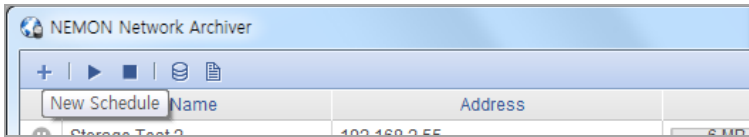

Step 1) Entering Archiving Site address and following information for a site registration and log-in.

The screenshot shows a 'Schedule Wizard : 1. Site' dialog box. It contains several input fields: 'Name' with the value 'New Site', 'Address' with '192.168.1.1', 'Playback Port' with '10102', 'User' with a dropdown menu showing 'Administrator', and 'Password' with a masked input (four dots). At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.

Name : Enter the Site name.


Address : Enter the Site address for Remote Archiving.

Playback Port : Enter Playback Port for the site. The default setting value is 10102 and it depends on the network setting of the local site.

Note: Network Archiver requires to set Playback Port as a DVR for its network connection.

User / Password : Enter User and Password to log in. User has to be set with authority of Network Playback.

Step 2) Selecting a starting point of data for Remote Archiving.

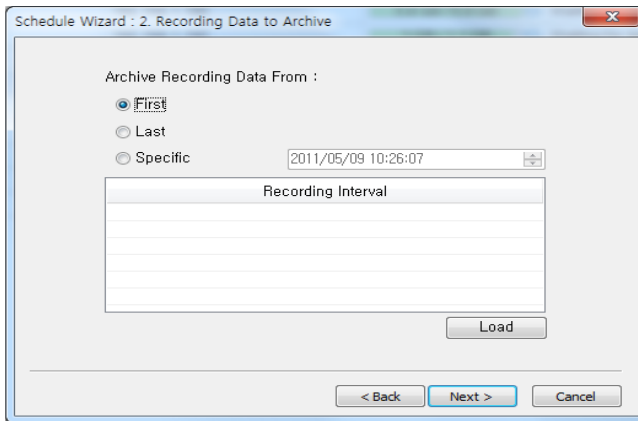


First : Archiving from the very beginning of recorded data on DVR.


Last : Archiving from the latest recorded data on DVR.

Specific : Archiving from designated point by user. If data doesn't exist on the designated point, archiving will start from the latest data right after the designated point.

Load : Shows the status of recorded data on the DVR. It is displayed on Recording Interval List.

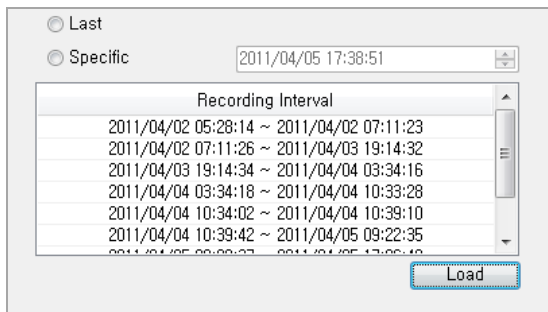

Step 3) Setting performing schedule for Archiving.

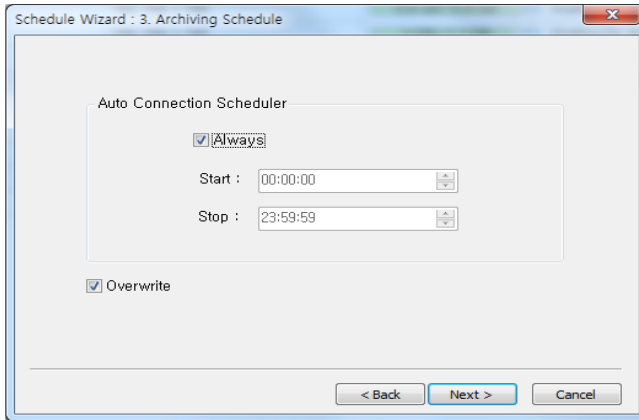


Auto Connection Scheduler : Set a time schedule for Archiving. Select a time for Start/Stop point, the system will automatically perform Archiving as the schedule set. If Archiving is failed due to any causes, it will continuously attempt to re-connect the sites. If Always is selected, Archiving will continue until user stops the operation.

Note: The S/W only attempts to reconnect the site when it is within the Archiving schedule as pre-set.

Overwrite : Select Overwrite to overwrite storage. When it is full, the oldest data is automatically overwritten by the latest data, and Archiving continues.

Step 4) Creating Storage Group. (refer to 4-D for the detail)

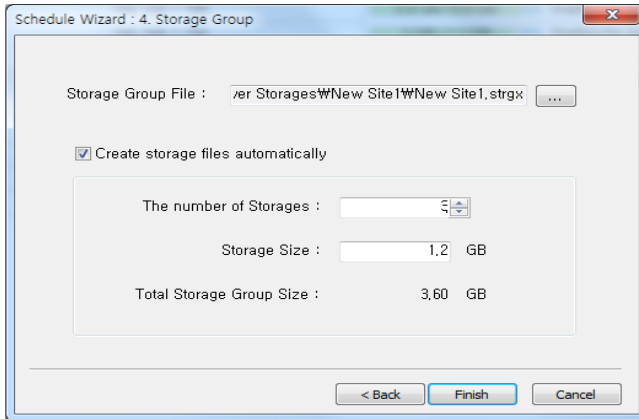

Storage Group File : Set name of new Storage Group File. The default directory is designated to "My Documents NEMON Network Archiver Storages\<Site Name>\<Site Name>.strgx".

Create storage files automatically : Select to determine whether to create storage files automatically or not. Storage File can be created individually by Storage Manager (refer to 4-D). The created file is saved in "<Site Name> <Numbers>.strg".

In case of creating storage files automatically, enter the following information.

The number of Storages : The number of Storage Files to be created.

Storage Size : Size of each Storage File. The default setting value is 4GB. It needs to set up with at least 0.5GB or more.

Total Storage Group Size : Total Storage Group Size is equal to (The number of Storages) X (Storage Size).


Archiving will be performed once the setting is completed by clicking "finish" button. Use Schedule Wizard to add new Archiving option.

4. Set Up

A. Main Screen

Each schedule information is displayed on the main screen in real time.

(Overall information of Site and Log-in / Starting point of 'Archiving / Storage Group is considered and called 'Schedule'. Each list is considered as one 'Schedule'.)

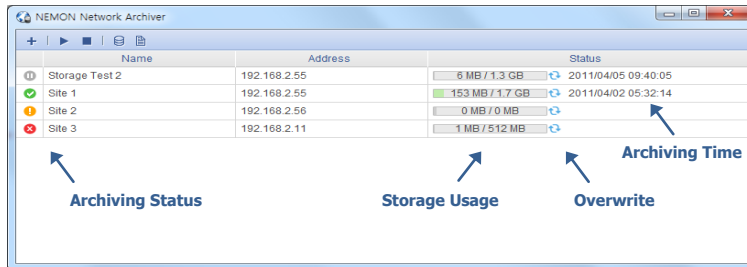

Archiving Status : described with different icon designs. Please refer to below list to understand each icons for different Archiving .

	Archiving is On
	Site being connected
	Pause
	Archiving can't be continued
	Archiving Failed

* The explanation of current status can be displayed with tool tip using a mouse.

Name : Site name designated at Schedule Wizard.

Address : Site address for Archiving.

Storage Usage : Current usage or full capacity of Storage Group used for Archiving. The color of bar graph shows its usage and the transmission status of data being archived.

	Data is being transmitted and Archived without any delays or latencies.
	Data is being transmitted and Archived with some delays or latencies.
	Archiving is stopped

Overwrite : If the icon is in blue, Overwrite option is on.

Archiving Time : It displays the current time of recorded data on DVR for Archiving.

If clicking right button of mouse on each list, it displays contextual menu for the Schedule operations.

	Name	Address	
ⓘ	Storage Test2	100.120.0.55	6 MB / 1.3 GB
✓	Site 1	55	1.7 GB / 1.7 GB
!	Site 2	56	0 MB / 0 MB
✗	Site 3	11	1 MB / 512 MB

Start

Stop

Delete

Info..

Start : Start selected Schedule.

Stop : Stop selected Schedule.

Delete : Delete selected Schedule. The Schedule can be deleted only when the Archiving is stopped. It is also possible to choose deletion of Storage File from separate Dialog.

Info : Read the detail of selected Schedule. (refer to C. for the detail)

B. Tool Bar



New Schedule () : Run Schedule Wizard.

Start All () : Start all registered Schedule. (It doesn't affect the sites where Archiving is already in progress.)

Stop All () : Stop all registered Schedule. (It doesn't affect the sites where Archiving is already stopped.)

Storage Manager () : Run Storage Manager. (refer to 4-D. for the detail)

Log () : Check Log list of each site. (refer to 4-E. for the detail)

C. Detail Information

a. Site

Info

Site Archiving Schedule

Name : Site 3

Address : 192.168.2.55

Playback Port : 10102

User : Administrator

Password : ●●●●●●●●●●

Status : Archiving

Usage : 531 MB / 536 MB

Period : 2011/05/02 22:07:42 ~ 2011/05/02 22:21:34

Reschedule... Storage Manager... OK Cancel Apply

Name / Address / Playback Port / Username / Password : Information on registered Site and Log-in. (refer to 3-Step1 for the detail)

Status : It shows current Archiving status and directly related with Icon on Archiving status of main screen. It is shown as Connecting, Archiving, Stopped, and etc. and when the progress of Archiving is not performed or failed, it displays the cause of failure.

Usage : Usage or full capacity of Storage Group used for Archiving.

Period : Full period of data has been archived.


Reschedule : Reschedule the starting point of Archiving data. The way to do is the same as 3-Step. If new schedule is set, the new schedule will be displayed as shown below.

Period : 2011/04/02 08:44:41 ~ 2011/04/02 09:19:42
(Scheduled from Last)

Storage Manager : Run Storage Manager for the site.

* After modifying information about Archiving such as Name, Address, Playback Port, Username, Password, Overwrite, Reschedule, make sure click Apply button to confirm the changes.

b. Archiving Schedule

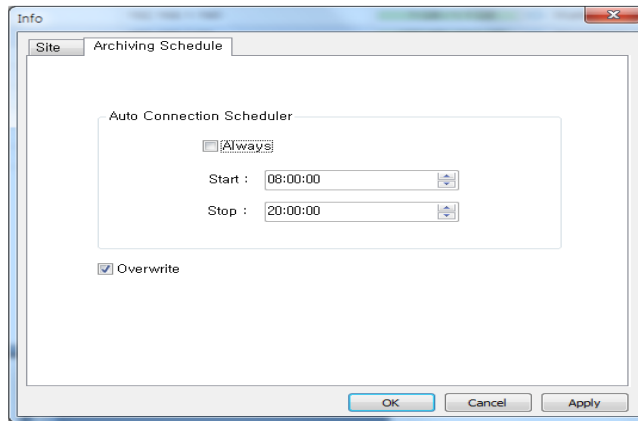


Auto Connection Scheduler : Set time schedule for Archiving. Select time for Start/Stop points. Archiving will automatically be performed as the time set. If Archiving is failed due to any causes, it will continuously attempt to re-connect the sites. If Always is selected, Archiving will continue until user stops the operation.

Overwrite : Select Overwrite to overwrite storage. When it is full, the oldest data is automatically overwritten by the latest data, and Archiving continues.

D. Storage Manager

Manage Storage Group each Archiving schedule.

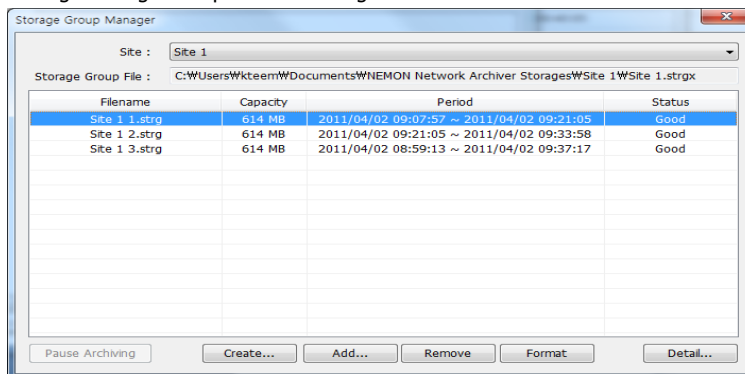

Filename : Name of Storage File. It is possible to check full path where the file is being stored by tool tip when mouse cursor is placed on the Filename.

Capacity : Full capacity of File.

Period : Full period of recorded data on Storage File.

Status : Current status of File.

Good	Able to retreat a file
Not Formatted	Not been formatted
Open Error	Not able to open a file
Not Found	File does not exist

Create : Create new Storage File.

Add : Add existing Storage File.


Remove : Remove selected Storage File. It is possible to choose deletion of Storage File from separate Dialog.

Format : Format selected Storage File.

* Each site has own ID and the ID is included and hidden on each Storage File as well. If adding Storage File used from other Sites, it recognizes as "Not Formatted" due to different IDs, thus the new Storage needs to be formatted.


* Create/Add/Remove/Format can not be performed for Storage Group under Archiving. Try it after stopping Archiving (Pause Archiving).

Detail : It is available to check the detail section list of the selected Storage File from separate Dialog.

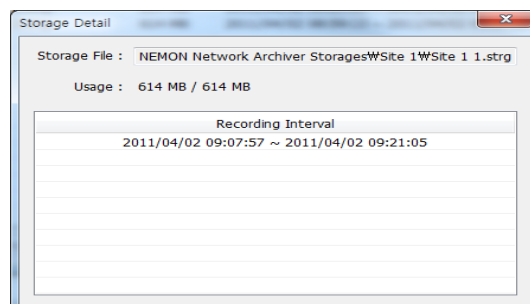


E. Log

Check the Log status of each Schedule.

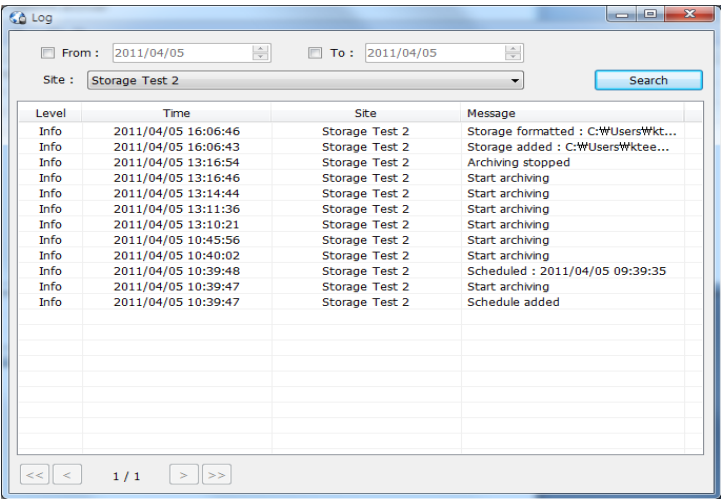

F. System Tray


The program icon (System Tray) is located as shown below. Network Archiver provides System Tray. Find the System Tray in order to shut down Network Archiver safely and completely.

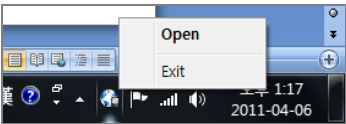

5. Reference

a. Storage Playback to utilize NEMON2

Each Storage File(.strg) and Storage Group File(.strgx) can be played on NEMON2. Playback all Storage Files linked and belong to the Storage Group at once.

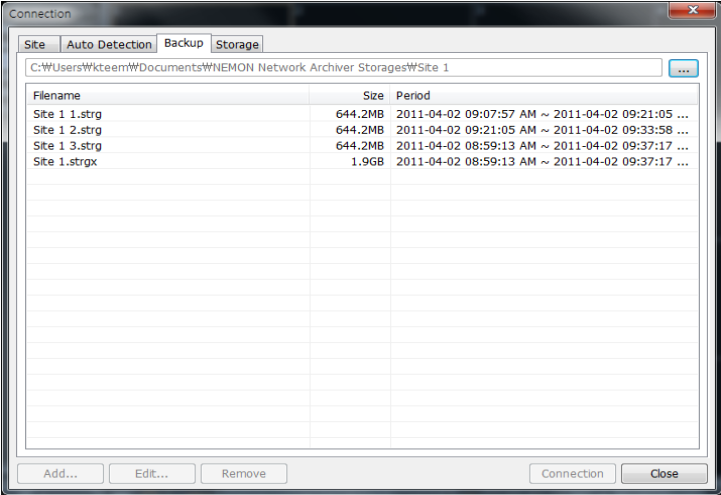

b. Restrictions

1. Storage File which is being used by Network Archiver can not be playback at the same time on NEMON2. On the contrary, Storage File which is being used by NEMON2 can not be used on Network Archiver.
2. Archiving progress occupies one Playback Connection of the site.
3. Full capacity of Storage File has to be at least 0.5GB or more.
4. Path for the first created Storage Group File by Schedule Wizard cannot be changed once it is created.

COMPLIANCE NOTICE OF FCC:

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE, IN WHICH CASE USERS WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT THEIR OWN EXPENSE.

WARNING: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THIS CLASS OF DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.

WEEE (Waste Electrical & Electronic Equipment)

Correct Disposal of This Product (Applicable in the European Union and other European countries with separate collection systems)



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

ROHS Compliance

